

Northring for Ultrasonic anemometer

The adapter is installed between mast and sensor. The adapter is aligned to north by means of a bearing tube. After alignment the sensor is mounted onto the adapter. A pin in the adapter and a north boring in the base of the anemometer guarantee that the sensor is aligned to north. There is no re-alignment necessary with replacement of the sensor.

Specification

Part number: 508696

General

Length	90 mm
Material	Alluminum anodized (AlMgSi1)
Weight	0.4 kg
Mounting	for mast \varnothing 50 mm for sensor \varnothing 50 mm

Versions

No other versions of this product are available.

Accessories

No accessories are available for this product.

