

# Wind Transmitter

## >>First Class Advanced X<<

### Instruction for Use

4.3352.00.400 / 4x1

4.3352.10.400 / 4x1

- Classified according to IEC 61400-12-1 EDITION 2.0 (2017-03)

At start of software version V4.0



Dok. No. 021814/08/24

THE WORLD OF WEATHER DATA

## Safety Instructions

- Before operating with or at the device/product, read through the operating instructions. This manual contains instructions which should be followed on mounting, start-up, and operation. A non-observance might cause:
  - failure of important functions
  - endangerment of persons by electrical or mechanical effect
  - damage to objects
- Mounting, electrical connection and wiring of the device/product must be carried out only by a qualified technician who is familiar with and observes the engineering regulations, provisions and standards applicable in each case.
- Repairs and maintenance may only be carried out by trained staff or **Adolf Thies GmbH & Co. KG**. Only components and spare parts supplied and/or recommended by **Adolf Thies GmbH & Co. KG** should be used for repairs.
- Electrical devices/products must be mounted and wired only in a voltage-free state.
- **Adolf Thies GmbH & Co KG** guarantees proper functioning of the device/products provided that no modifications have been made to the mechanics, electronics or software, and that the following points are observed:
- All information, warnings and instructions for use included in these operating instructions must be taken into account and observed as this is essential to ensure trouble-free operation and a safe condition of the measuring system / device / product.
- The device / product is designed for a specific application as described in these operating instructions.
- The device / product should be operated with the accessories and consumables supplied and/or recommended by **Adolf Thies GmbH & Co KG**.
- Recommendation: As it is possible that each measuring system / device / product may, under certain conditions, and in rare cases, may also output erroneous measuring values, it is recommended using redundant systems with plausibility checks for **security-relevant applications**.

## Environment

- As a longstanding manufacturer of sensors Adolf Thies GmbH & Co KG is committed to the objectives of environmental protection and is therefore willing to take back all supplied products governed by the provisions of "ElektroG" (German Electrical and Electronic Equipment Act) and to perform environmentally compatible disposal and recycling. We are prepared to take back all Thies products concerned free of charge if returned to Thies by our customers carriage-paid.
- Make sure you retain packaging for storage or transport of products. Should packaging however no longer be required, please arrange for recycling as the packaging materials are designed to be recycled.



## Documentation

- © Copyright **Adolf Thies GmbH & Co KG**, Göttingen / Germany
- Although these operating instructions have been drawn up with due care, **Adolf Thies GmbH & Co KG** can accept no liability whatsoever for any technical and typographical errors or omissions in this document that might remain.
- We can accept no liability whatsoever for any losses arising from the information contained in this document.
- Subject to modification in terms of content.
- The device / product should not be passed on without the/these operating instructions.

## Table of contents

1	Models .....	6
2	Application .....	6
3	Setup and Mode of Operation .....	7
4	Standard Curve and Calibration Tables .....	11
4.1	Case I Using Standard Characteristic Curve acc. to Classification .....	12
4.2	Case II Using Current Calibration Table acc. to Classification .....	15
4.3	Determine Occupied Calibration Tables .....	18
4.4	Read Calibration Table .....	18
4.5	Write Calibration Table .....	19
5	Integrated Corrections .....	20
5.1	Correction of the Wind Velocity Depending on the Air Pressure .....	20
6	Recommendation Side Selection / Standard Installation .....	21
7	Installation.....	21
7.1	Mechanical Mounting.....	22
7.1.1	North Alignment .....	23
7.2	Electrical Mounting .....	24
7.2.1	Cable .....	24
7.2.2	Cable Shield.....	24
7.2.3	Plug and Cable Mounting .....	26
7.3	Connecting Diagram.....	27
8	Maintenance .....	28
9	Firmware Version / Update .....	29
10	Bootloader .....	30
11	Interface.....	31
11.1	Command Interpreter THIES .....	32
11.1.1	Telegram Formats.....	33
11.1.2	Check Sum: .....	34
11.1.3	Status Information:.....	34
11.2	Commands and Description .....	35
11.2.1	Command BR .....	37
11.2.2	Command BT .....	37
11.2.3	Command CI .....	38
11.2.4	Command CK .....	38
11.2.5	Command FB .....	39
11.2.6	Command FO .....	39
11.2.7	Command HP .....	40
11.2.8	Command HT .....	40
11.2.9	Command ID .....	41
11.2.10	Command KX .....	42
11.2.11	Command KY .....	43
11.2.12	Command LL .....	44
11.2.13	Command MI .....	44
11.2.14	Command MS .....	45
11.2.15	Command OH .....	46
11.2.16	Command RC .....	47
11.2.17	Command RD .....	49
11.2.18	Command RS .....	49
11.2.19	Command SF .....	50
11.2.20	Command SH .....	50
11.2.21	Command SM .....	51
11.2.22	Command SN .....	52
11.2.23	Command SR .....	52
11.2.24	Command SV .....	52

11.2.25	Command TR .....	53
11.2.26	Command UC .....	53
11.2.27	Command WC .....	54
11.3	Command Interpreter MODBUS RTU .....	55
11.3.1	Measured Values (Input Register).....	56
11.3.2	Commands (Holding Register) .....	64
11.3.3	Calibration Tables in the MODBUS-RTU Interpreter .....	64
11.3.4	Reading Time Stamp of all Calibration Tables .....	65
11.3.5	Reading Calibration Tables.....	66
11.3.6	Device identification (Read Device Identification).....	70
12	Appendix 1 Data Telegrams.....	71
12.1	Telegram 1 .....	71
12.2	Telegram 2 .....	74
12.3	Telegram 4 .....	75
12.4	Telegram 5 .....	76
12.5	Telegram 6 .....	77
12.6	Measured Value Memory Telegram.....	78
13	Technical Data.....	81
14	FAQ - Frequently Asked Questions.....	82
15	Dimensional Drawing .....	83
16	Accessories (optional).....	84
17	EC-Declaration of Conformity .....	86

## **Table overview:**

Table 1 : Status Word.....	35
Table 2 : Command List .....	36
Table 3 : MODBUS Frame .....	55
Table 4: MODBUS Exceptions .....	55
Table 5 : MODBUS Input Register.....	62
Table 6: Calibration Tables.....	65
Table 7: Reading Time .....	66
Table 8: Reading Calibration .....	69
Table 9: Device Identification.....	70
Table 10: Measured Value Telegram.....	73
Table 11 : Measured Value Telegram 2.....	75
Table 12: Value-Telegram 4 .....	76
Table 13: Measured value telegram 5 .....	76
Table 14: Value-Telegram 6 .....	78
Table 15 : Measured Value Memory Telegram.....	79

## **Figure:**

Figure 1: Connections between parameters FO, MS and UC .....	8
Figure 2: Curve of a calibration table and normal curve.....	11
Figure 3: Data output after calibration E433524X0 2.3 in order to have frequency output at pin 1 according to the classification with standard characteristic curve .....	13
Figure 4: Data output after calibration E433524X2 2.3 in order to have serial output according to the classification with standard characteristic curve.....	14
Figure 5: Data output after calibration E433524X1 2.3 in order to have frequency output at pin 1 according to the classification with current calibration table .....	16
Figure 6: Data output after calibration E433524X3 2.3 in order to have serial output according to the classification with current calibration table .....	17

## **Patent**

This device is protected by patents.

Patent no.: EP 1 398 637

Patent no.: DE 103 27 632

Patent no.: EP 1 489 427

## **Shipment**

1 x Wind Transmitter First Class Advanced X

1 x Connection plug

1 x Short Instructions for use (the complete instructions for use is available for download)

The instructions for use are available for download under the following link:

[https://www.thiesclima.com/db/dnl/4.3352.x0.400-401\\_Wind\\_Transmitter\\_FirstClass-Advanced-X\\_eng.pdf](https://www.thiesclima.com/db/dnl/4.3352.x0.400-401_Wind_Transmitter_FirstClass-Advanced-X_eng.pdf)

## 1 Models

---

Order no.	Measuring range	Serial interface / Data format	Supply	Heater
4.3352.00.400	0,3 ... 75m/s	RS 485 / ASCII	3,7 ... 42V DC	24V AC/DC, 25W
4.3352.10.400	0,3 ... 75m/s	RS 485 / ASCII	3,7 ... 42V DC	without
4.3352.00.401	0,3 ... 75m/s	RS 485 / MODBUS	3,7 ... 42V DC	24V AC/DC, 25W
4.3352.10.401	0,3 ... 75m/s	RS 485 / MODBUS	3,7 ... 42V DC	without
4.3352.00.491	Identical in design to 4.3352.00.401 with the following parameters: BR=384; ID=1; HT=1; HP=65535; FO=4			
4.3352.10.491	Identical in design to 4.3352.10.401 with the following parameters: BR=384; ID=1; HT=0; HP=65535; FO=4			

## 2 Application

---

The wind transmitter is intended for use in the wind energy, meteorology and environmental measuring technology. Primarily developed for position evaluation and measurement of power curves of wind turbines, the anemometer gathers the following measured variables:

- Horizontal component of the wind velocity
- Absolute and relative air pressure
- Inclination angle between the Z-axis and the vertical
- Inclination angle between the X-axis and the horizontal
- Inclination angle between the Y-axis and the horizontal
- Frequency and acceleration in the X-, Y- and Z-axis
- Housing interior temperature
- Very low power consumption

Further characteristics include a defined and optimized dynamic behavior even at highly intense turbulences, minimal over speeding, a low starting value and an optimized oblique inflow behavior.

An integrated compensation of the effect of the air density on the rotation velocity of the cup star distinguishes this sensor especially in its characteristics.

There is a digital interface to the device in form of an RS485 interface in half-duplex mode. Together with the ID-based communication, the interface enables the operation of the wind transmitter in a bus. Two data protocols are available:

- ASCII (THIES format)
- Binary (MODBUS-RTU)

For operation in winter, the device can be equipped optionally with an electronically controlled heater which provides a hardly measurable friction moment of the ball bearings in low temperatures and prevents any ice build-up on shaft and on the gap.

### 3 Setup and Mode of Operation

---

The wind transmitter can be supplied with direct voltages from 3.7V up to 42V at very low power consumption. All of the electronics is a streamlined, low power design. Supply of the optional heater is provided separately with a direct or alternate voltage of 24V. The heater will most probably prevent icing/clogging of the wind transmitter First Class even under extreme meteorological conditions.

The external parts of the device are made from corrosion resistant anodized aluminum. Highly efficient labyrinth seals and O-rings protect the sensitive parts on the inside of the device from humidity and dust influences. It is assembled on a mast pipe, the electric connection is in the lower part of the sensor.

#### **Wind Velocity:**


A cup star with ball bearing and low inertia and 3 cups from carbon fiber reinforced plastic is rotated by the wind. The velocity is sensed opto-electronically, translated into a square signal with frequency proportional to the velocity and measured 4 times per second. The measured frequency is converted into a wind velocity with the standard curve. An adaptation of this standard curve can be done with calibration values from a programmable calibration table (**Standard Curve and Calibration Tables**).

The compensation depending on the air pressure which is calculated with the help of the calibration table.

All corrected wind velocity values are available as instantaneous values. The Instantaneous value is the gliding mean value of the last second.

For the calculation of mean value, gust, minimum value, standard deviation and intensity of turbulence the source can be selected by the command „MS“.

The following figures show the described connection.

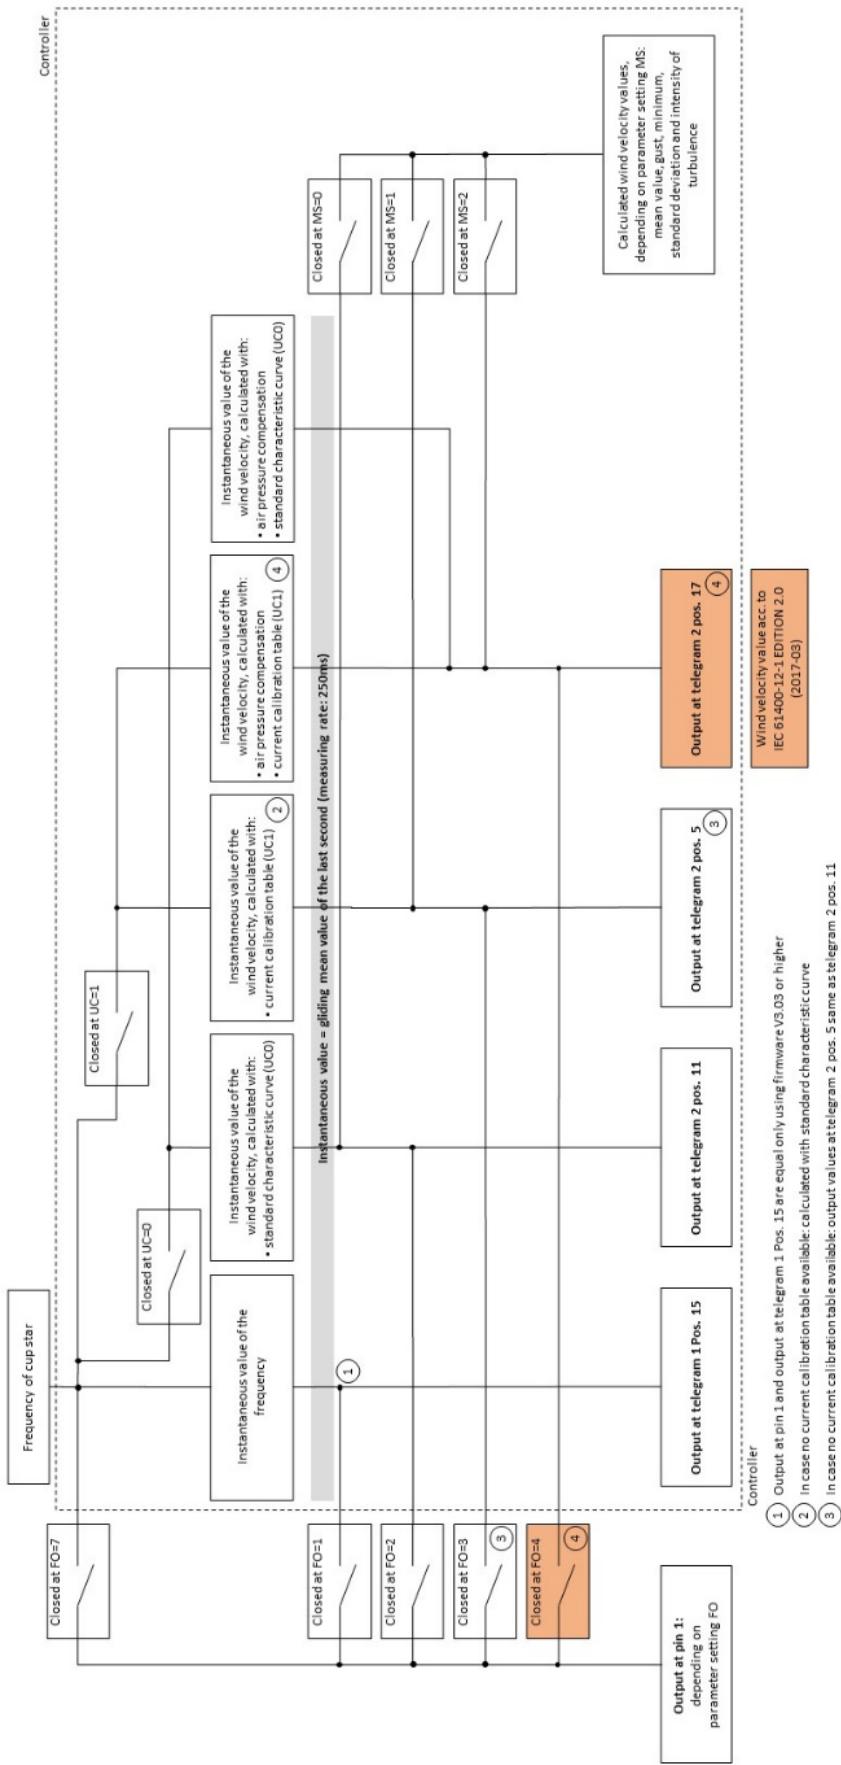

**Figure 1: Connections between parameters FO, MS and UC**

### **Instantaneous value:**

The instantaneous value is the gliding mean value of the last second. The scanning of the measuring values is carried out every 0.25s, and is not alterable. The measuring value, queried at any time, includes always the data of the last second measured in the moment of query.

---

#### **Note:**

*From firmware version V02.09, is the interval of the gliding mean value one second. All older versions work with an interval of 3 seconds.*

---

### **Mean value:**

The mean value is the gliding mean value of the last ,n' seconds. ,n' is defined by the parameter MI.

### **Minimum:**

The minimum specifies the minimum instantaneous value of the last minute.

### **Gust:**

The gust is the maximum instantaneous value of the last minute.

### **Air pressure:**

A highly precise digital pressure sensor (piezoresistive) is used to measure the absolute air pressure. The wind transmitter calculates the relative air pressure with the set altitude (command SH).

Note: The absolute air pressure is used for application of the wind velocity compensation by means of air pressure. Indicating the sensor height by parameter SH is not required.

### **Inner Housing temperature:**

An integrated, digital temperature sensor measures the internal temperature of the housing.

## Inclination/vibration:

The measurement of the acceleration in space is done via a 3-axis acceleration sensor. The wind transmitter will calculate the inclination angle and vibrations (frequency and acceleration).

The inclination measurement is basing on the measurement of the acceleration of gravity. The three sensitive axes of the sensor are sensitive each only in one direction, thus only that value of the gravity acceleration is measured which affects in direction of these axes. The slope of the sensor in space is calculated from these three measuring values.

The angle  $\rho$  is defined as angle between the x-axis (north – south axis), and the horizontal.

The angle  $\Phi$  is defined as angle between the y-axis (west – east axis), and the horizontal.

The angle  $\theta$  is the angle between the z-axis, and the vertical.

Based on the angle, frequency and acceleration (amplitude), a qualified mast monitoring is possible.

## Frequency output:

In the pre-setting the uncorrected pulse values of the sensor are delivered on the frequency output. It behaves according to 4.3351.x.0.000. The behavior of the frequency output is set by parameter FO.

## Intensity of turbulence:

The intensity of turbulence is calculated from the instantaneous values of the wind velocity.

$$SD = \sqrt{\frac{1}{n} * \sum_{i=1}^n (v_i - \bar{v})^2}$$

$$T = \frac{SD}{\bar{v}}$$

SD: Standard deviation wind velocity

$v_i$ : instantaneous value wind velocity

/x: mean value wind velocity

T: Intensity of turbulence

## 4 Standard Curve and Calibration Tables

The measured frequency is converted into a wind velocity (in proportion to the velocity of the cup star) with the standard curve:

$$y = 0,0462 \bullet f + 0,21$$

y: Wind velocity in [m/s]

f: Frequency in [Hz]

**Note:**

*At frequencies less than 2Hz will be set the wind velocity to 0m/s.*

The standard curve can be corrected via a programmable calibration table with 32 entries.


The wind transmitter can save up to 10 calibration tables, including calibration certificate number, user-defined text, date and time of the calibration.

The entries within the calibration table are in form of X/Y value pairs. The X-values correspond to the actual wind velocity in m/s with 2 decimal places and the Y-values correspond to the related target wind velocity, also in m/s with 2 decimal places.

All entries of a non-programmed, i.e. unfilled table, are set on 0xffff.

It's not required to fill all 32 places in the table. The characteristic curve must represent part of the measuring range. The entries in the calibration tables have to start with the first index and must be continuing.

The following figure shows the relationship between a calibration table, the normal curve and the approximation outside the calibration area.

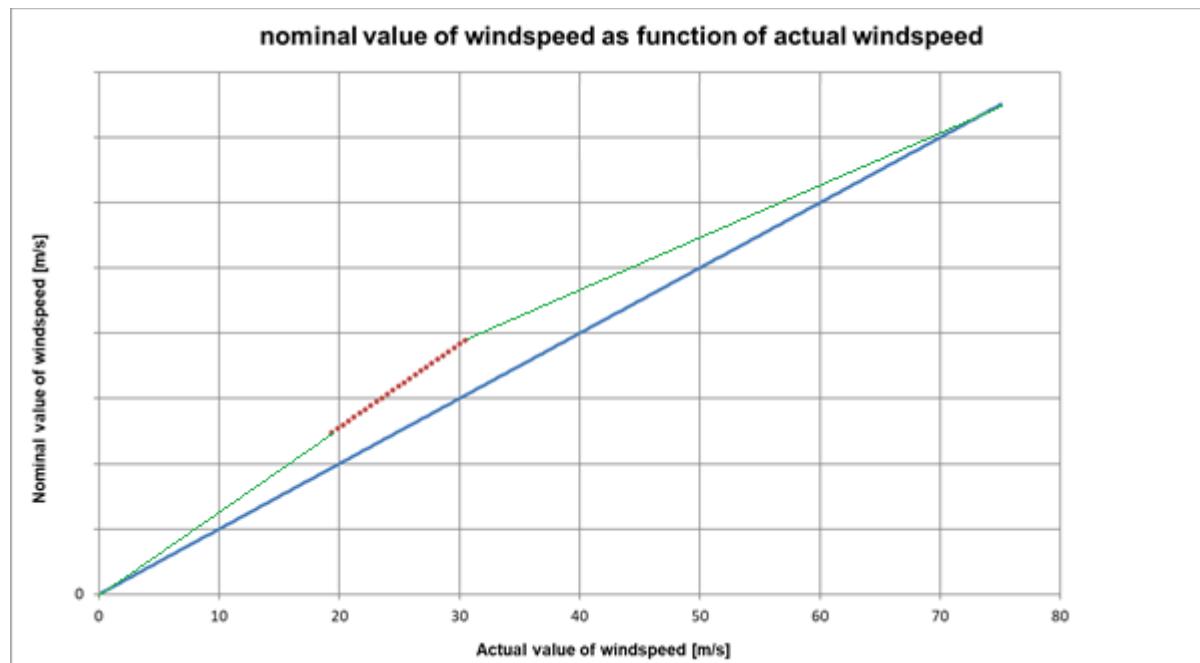

**Figure 2: Curve of a calibration table and normal curve**

Blue: standard characteristic curve, red: calibration curve, green: interpolation outside the calibration curve

If the measured actual wind velocity is between 2 entries of the table, the wanted target wind velocity is determined by linear interpolation.

If the measured actual wind velocity is outside the table range, the Bit2 is set in the status word and the standard curve is interpolated as follows:

- Is the measurement below the curve range, we have to interpolate between the starting point of the standard curve and the first table value.
- Is the measurement above the curve range, we have to interpolate between the last table value and the wind velocity 75m/s at the standard curve.

For the calculation of the corrected wind velocity, the calibration table last created is used.

---

**Note:**

*After setting the time stamp, the calibration table can no longer changed.*

*Please see the question and answers in FAQ [14. Frequently Ask Questions](#).*

---

## 4.1 Case I Using Standard Characteristic Curve acc. to Classification

The optimum way would be as specified below:


- Ia. First you must specify whether you want to use the frequency output (pin 1) or serial output to get your data
- Ib. Calibration must be done without regard to the air pressure. For calibration you must tell what kind of output you want to use in operation:  
frequency output (pin 1) → calibration data: wind velocity corrected by standard characteristic curve at pin 1; FO2  
serial output → calibration data: wind velocity corrected by standard characteristic curve at telegram 2 pos. 11
- Ic. Let the linear regression analysis (slope / offset) on the calibration certificate be done for the calibration data

---


**Note:**

*Steps Ib. and Ic. will be done automatically if you order the calibration according to Thies art. no. E433524X0 2.3 (for frequency output (pin 1); see picture 2) resp. E433524X2 2.3 (for serial output; see picture 3).*

---

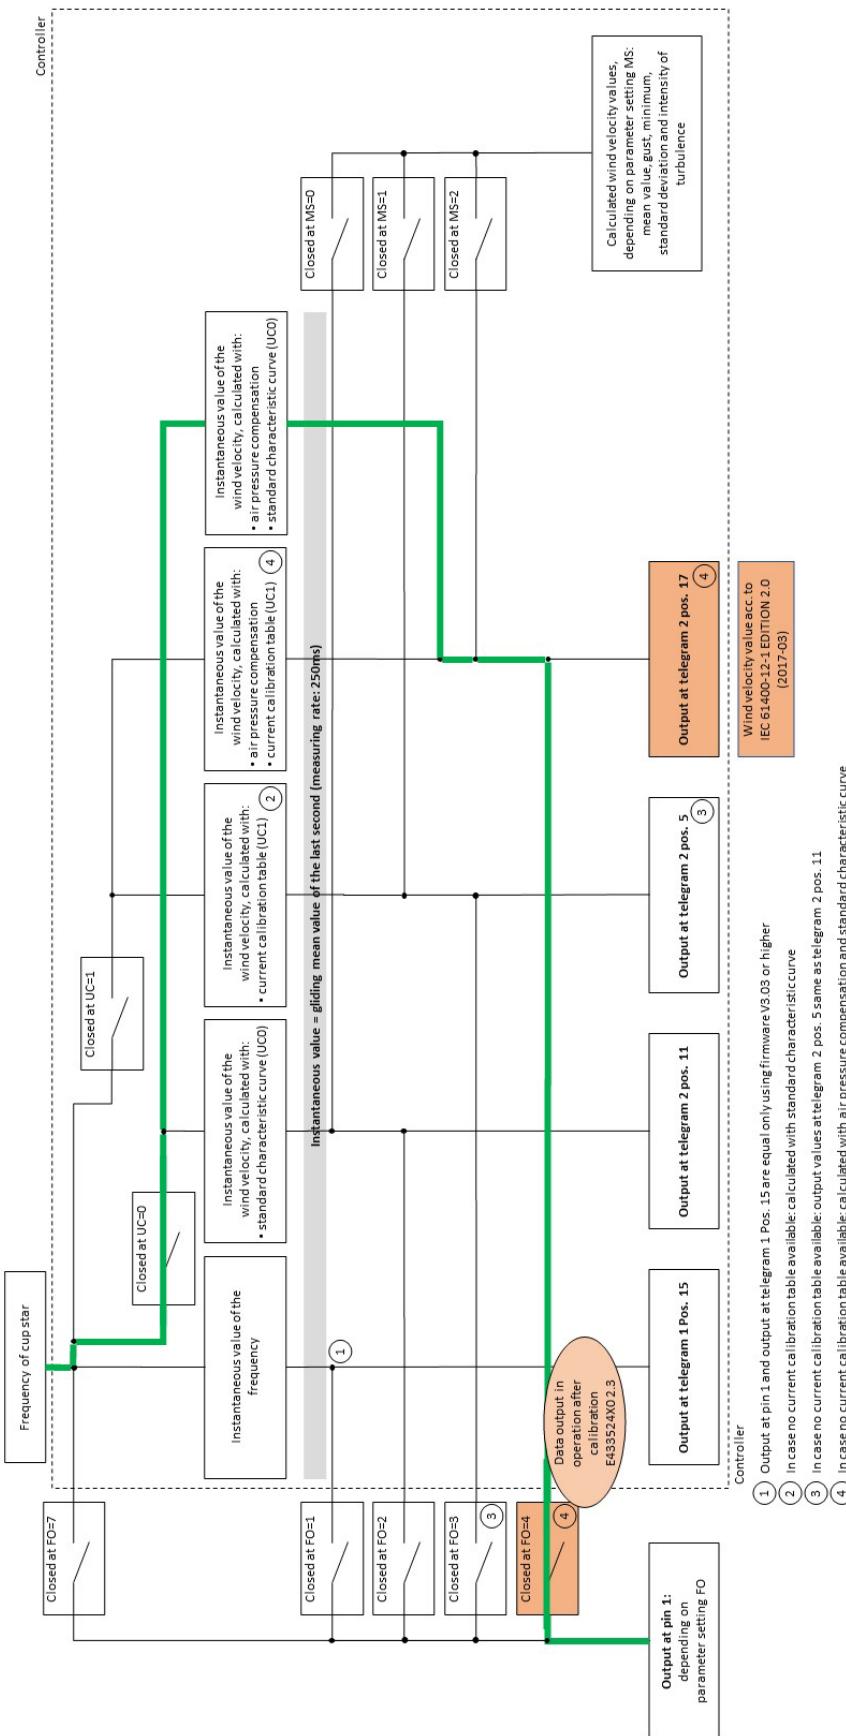

**Figure 3: Data output after calibration E433524X0 2.3 in order to have frequency output at pin 1 according to the classification with standard characteristic curve**

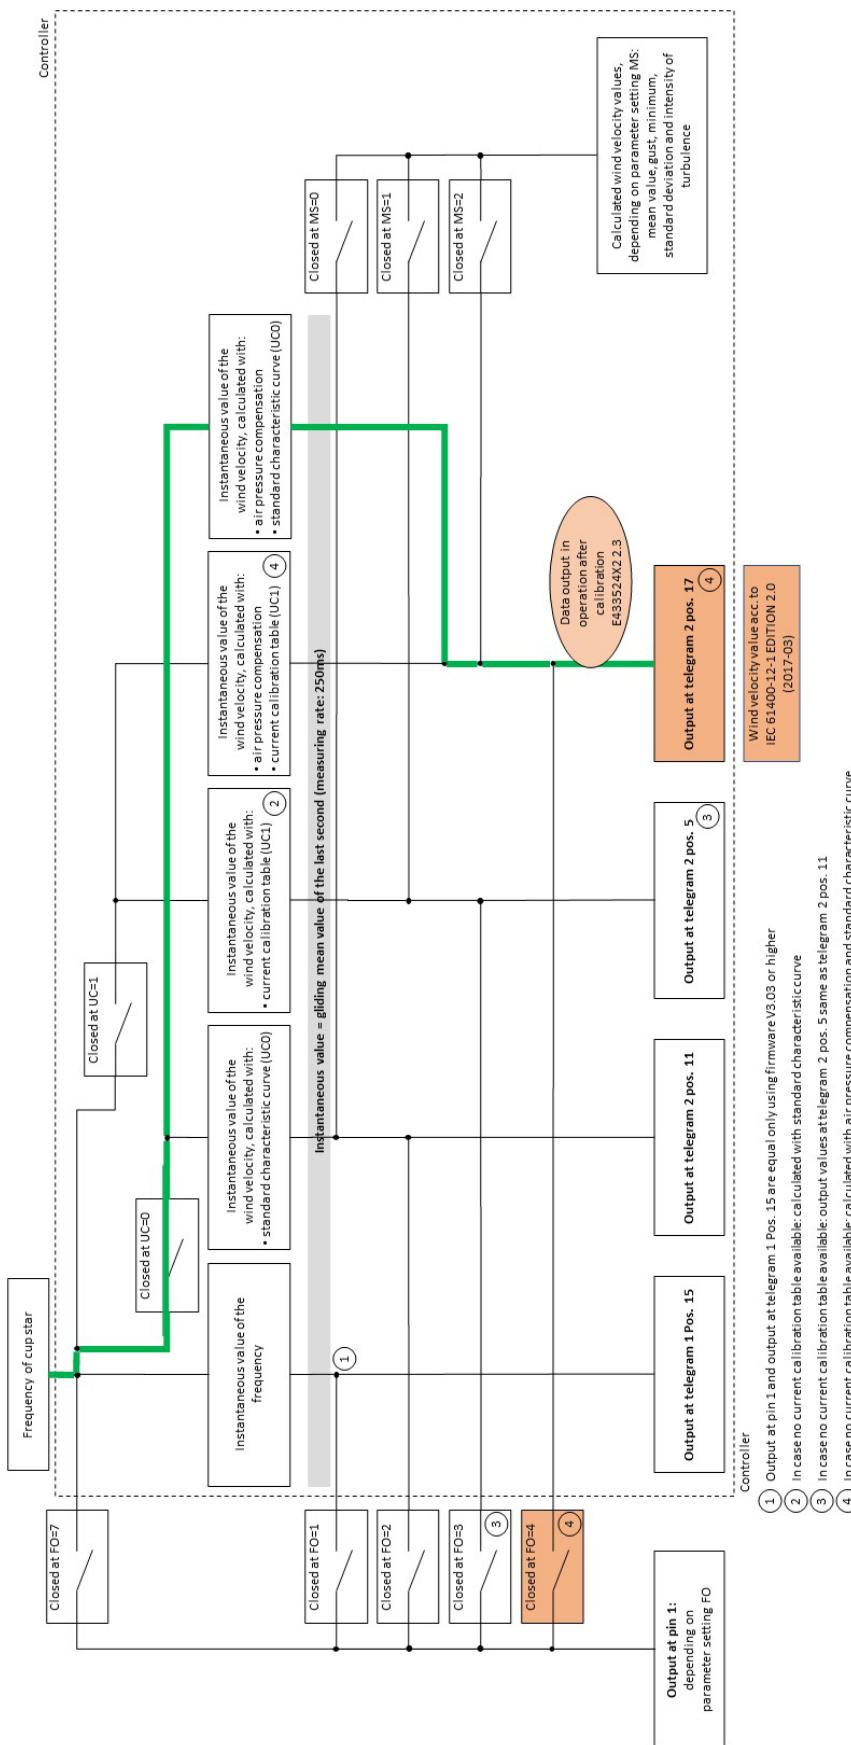

**Figure 4: Data output after calibration E433524X2 2.3 in order to have serial output according to the classification with standard characteristic curve**

For using frequency output (pin 1) next steps are as following:

- Ia. For operation, set FO4, UC0
- Ie. Collect data from frequency output. With this setting, you will get wind velocity corrected by standard characteristic curve and air pressure (so classification and calibration are applicable). This is without regard to the firmware version

These are the next steps for using serial output:

- If. For operation set UC0, MS2
- Ig. For type \*.400 (RS485) collect data v(hPa corr.) from telegram 2 / 4 / 5 / 6 pos. 17 (so classification and calibration are applicable). This is without regard to the firmware version
- Ih. For type \*.401 (MODBUS) collect data v(hPa corr.) from register 30013 / 35013 / 36005 / 36105 / 36205 (so classification and calibration are applicable). This is without regard to the firmware version


## 4.2 Case II Using Current Calibration Table acc. to Classification

The procedure will be as following:


- IIa. First you must specify whether you want to use the frequency output (pin 1) or serial output to get your data
- IIb. Calibration must be done without regard to the air pressure. For calibration you must tell what kind of output you want to use in operation:
  - frequency output (pin 1) → calibration data: wind velocity corrected by standard characteristic curve at pin 1; FO2
  - serial output → calibration data: wind velocity corrected by standard characteristic curve at telegram 2 pos. 11
- IIc. Let the linear regression analysis (slope / offset) on the calibration certificate be done for the calibration data
- IId. Let write the first calibration results into the current calibration table of the device. The first calibration is then an adjustment
- IIe. Storing the current calibration table on the device and using this data subsequently for calculating the wind speed values means changing the device in a certain way. Therefore, from the purely formal point of view a re-calibration would need to be done. However, the re-calibration in this case would show a deviation of (nearly) 0.

**Note:**

Steps IIb. to IIe. will be done automatically if you order the calibration according to Thies art. no. E433524X1 2.3 (for frequency output (pin 1); see picture 4) resp. E433524X3 2.3 (for serial output; see picture 5).

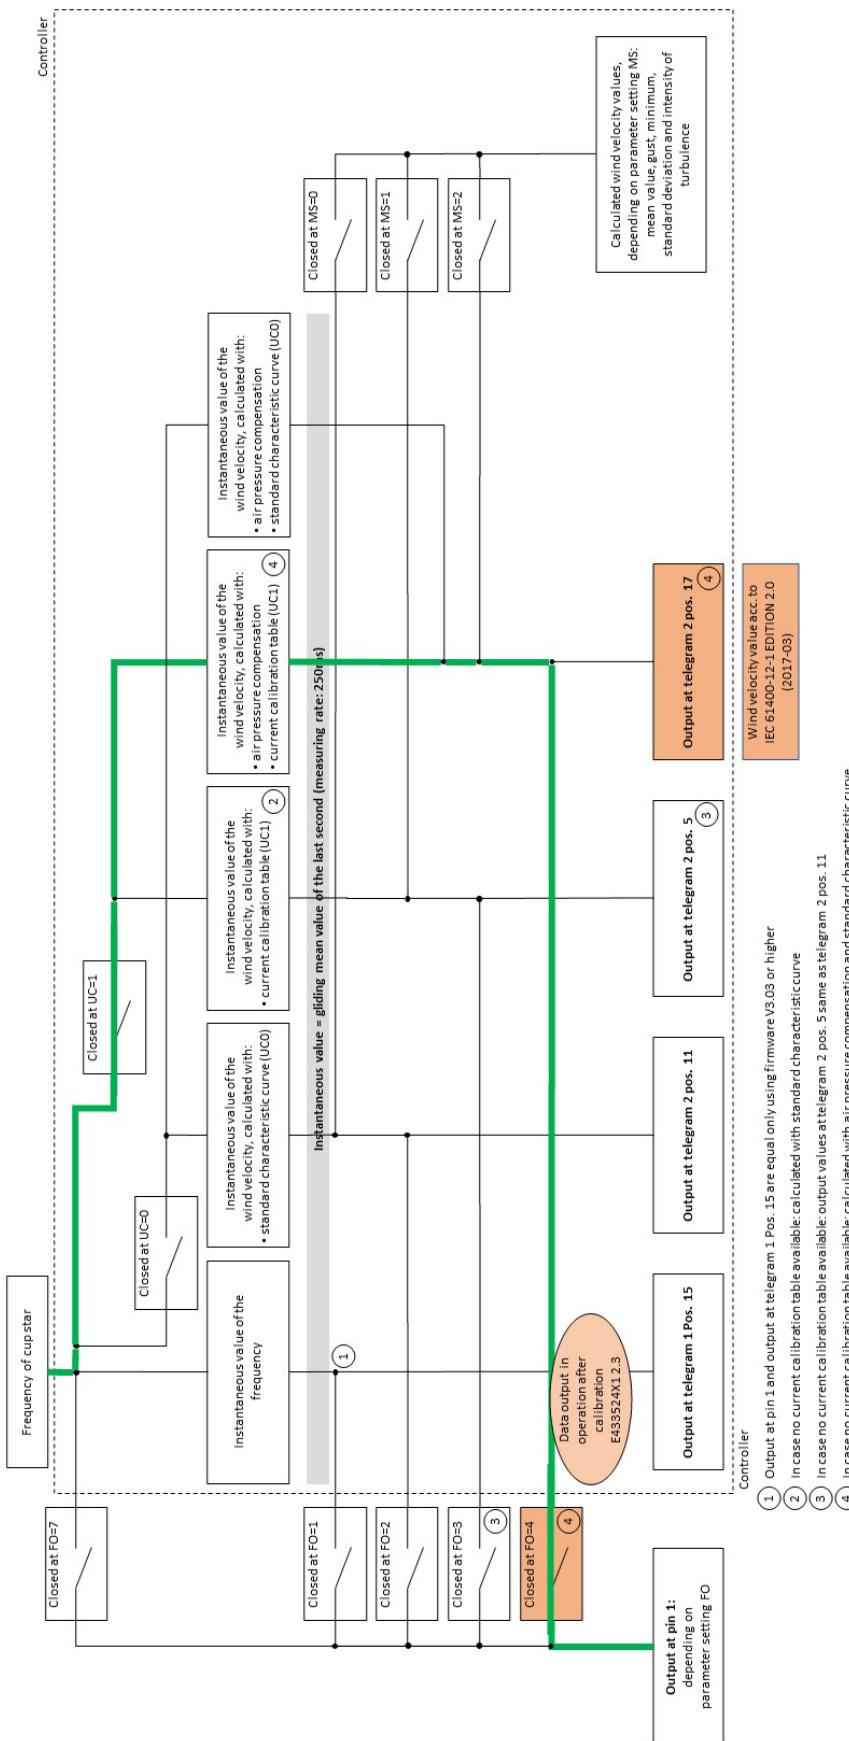

**Figure 5: Data output after calibration E433524X1 2.3 in order to have frequency output at pin 1 according to the classification with current calibration table**

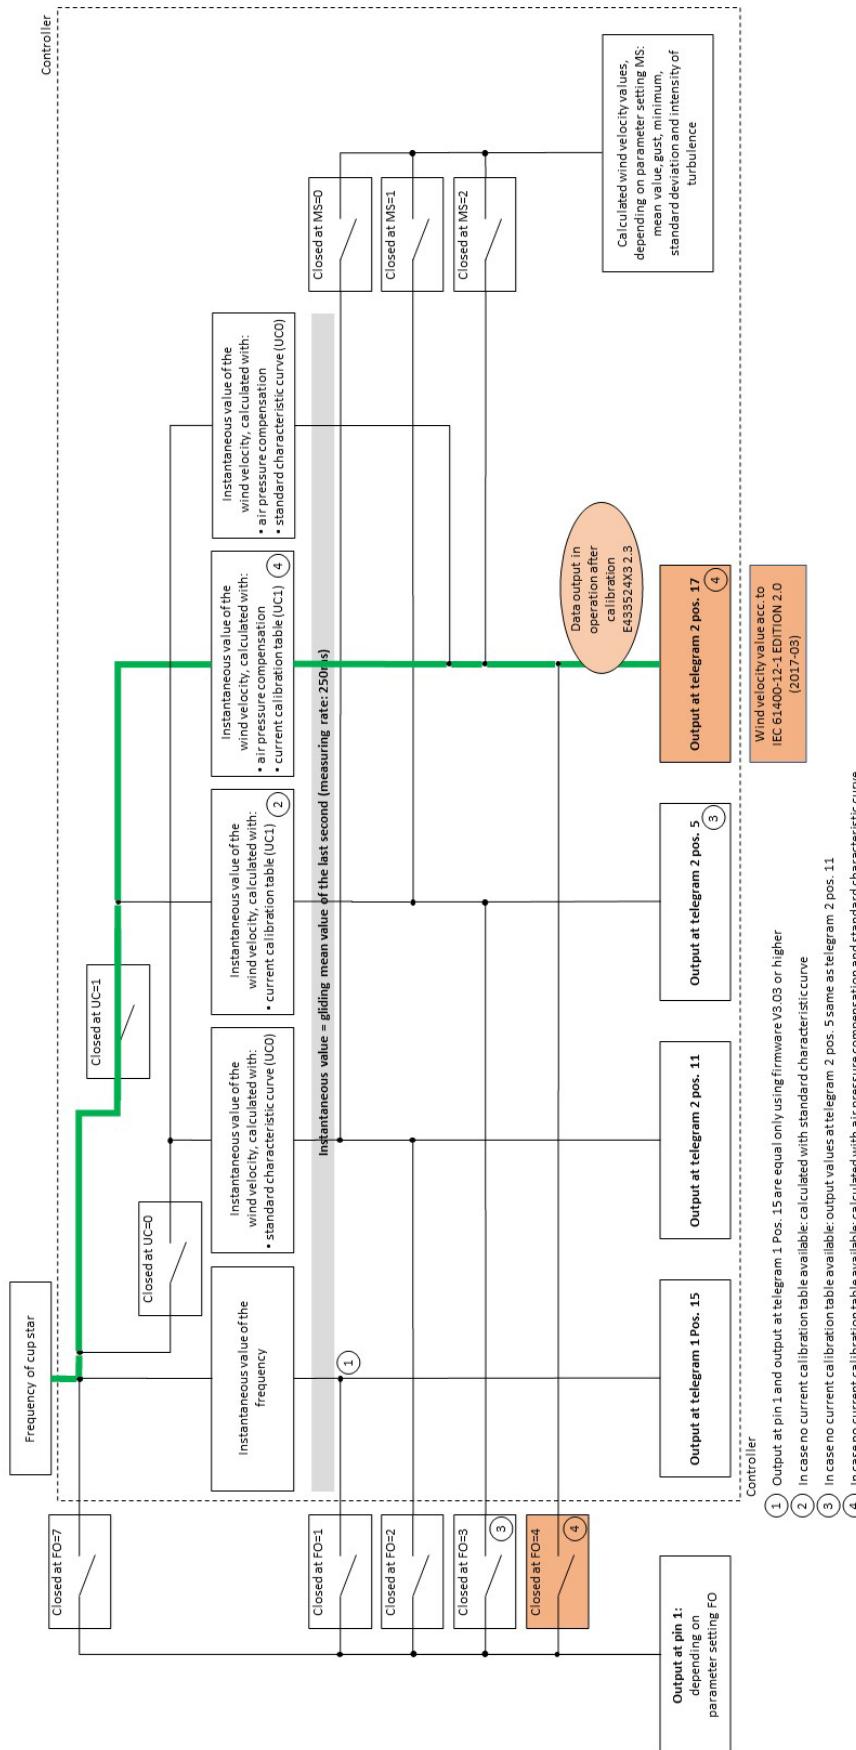

**Figure 6: Data output after calibration E433524X3 2.3 in order to have serial output according to the classification with current calibration table**

For using frequency output (pin 1) next steps are as following:

- IIf. For operation, set FO4, UC1
- IIg. Collect data from frequency output. With this setting, you will get wind velocity corrected by current calibration table and air pressure (so classification and calibration are applicable). This is without regard to the firmware version

These are the next steps for using serial output:

- IIh. For operation set UC1, MS2
- III. For type \*.400 (RS485) collect data v(hPa corr.) from telegram 2 / 4 / 5 / 6 pos. 17 (so classification and calibration are applicable). This is without regard to the firmware version
- IIj. For type \*.401 (MODBUS) collect data v(hPa corr.) from register 30013 / 35013 / 36005 / 36105 / 36205 (so classification and calibration are applicable). This is without regard to the firmware version

### 4.3 Determine Occupied Calibration Tables

In order to query the free and the already occupied calibration tables, the **Command RC** can be used with parameter 99. In the response string for the command “RC99”, the wind transmitter will output the time stamp of all 10 calibration tables. The time stamps are divided by the semicolon.

Example:

01RC99\r

2016.04.12;11:12:00;2010.00.00;00:00:00;2010.00.00;00:00:00;2010.00.00;00:00:00;2010.00.00;00:00:00;2010.00.00;00:00:00;2010.00.00;00:00:00;2010.00.00;00:00:00;2010.00.00;00:00:00;

### 4.4 Read Calibration Table

Reading the data from the calibration tables is done with the **Command RC**. The parameter will indicate the calibration table to be read (0: standard curve, 1 ... 10: Calibration tables). In the response for the command “RC<parameter>”, the wind transmitter will output all 32 table entries and calibration certificate number, user-defined text and time stamp of the table.

Example:

01RC1\r

00000;00000;00242;00242;00484;00484;00726;00726;00968;00968;01210;01210;01452;01452;01694;01694;01936;01936;02178;02178;02420;02420;02662;02662;02904;02904;03146;03146;03388;03388;03630;03630;03872;03872;04114;04114;04356;04356;04598;04598;04840;04840;05082;05082;05324;05324;05566;05566;05808;05808;06050;06050;06292;06292;06534;06534;06776;06776;07018;07018;07260;07260;07502;07502;0000001234;Test;2016.04.12;11:12:00

## 4.5 Write Calibration Table


Writing a calibration table is done with the **command WC**. With the parameter, the address to be written, and target and actual value of the sampling point (or calibration certificate number or user string or date/time) will be specified.


The written table entry is delivered back with the response telegram.

When writing in a calibration table, the next free table is always used. Writing into the memory of a table can be repeated as often as required as long as the memory for date/time is still empty.

A table is only used for the calculations if it has been completed with the date/time information.

The following flow diagram shows the process of writing a calibration table:

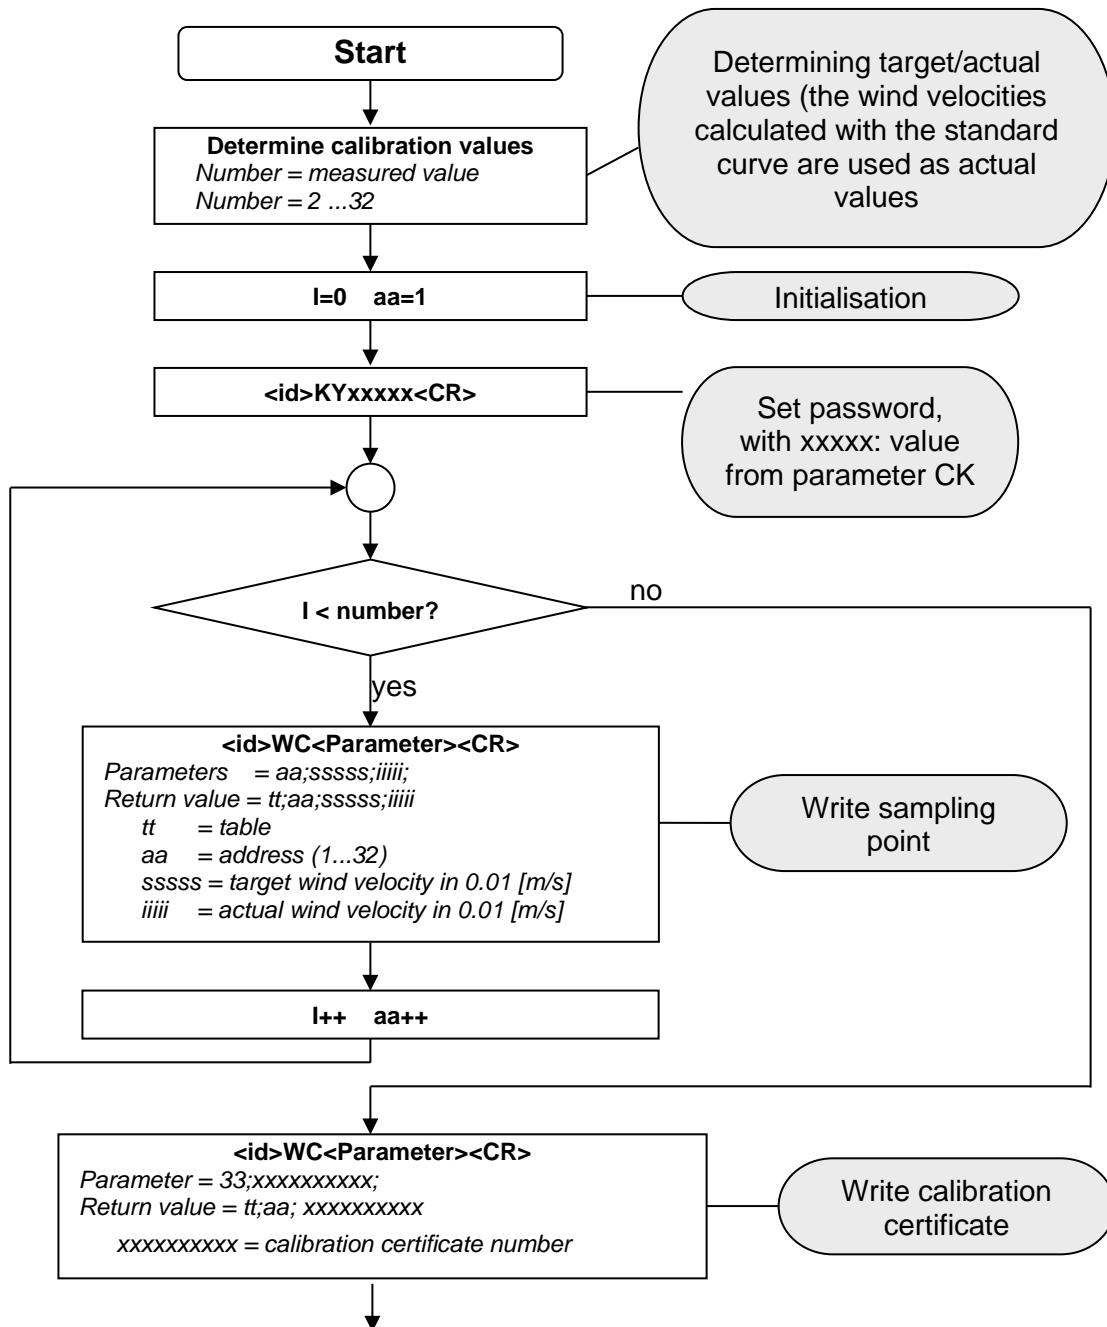

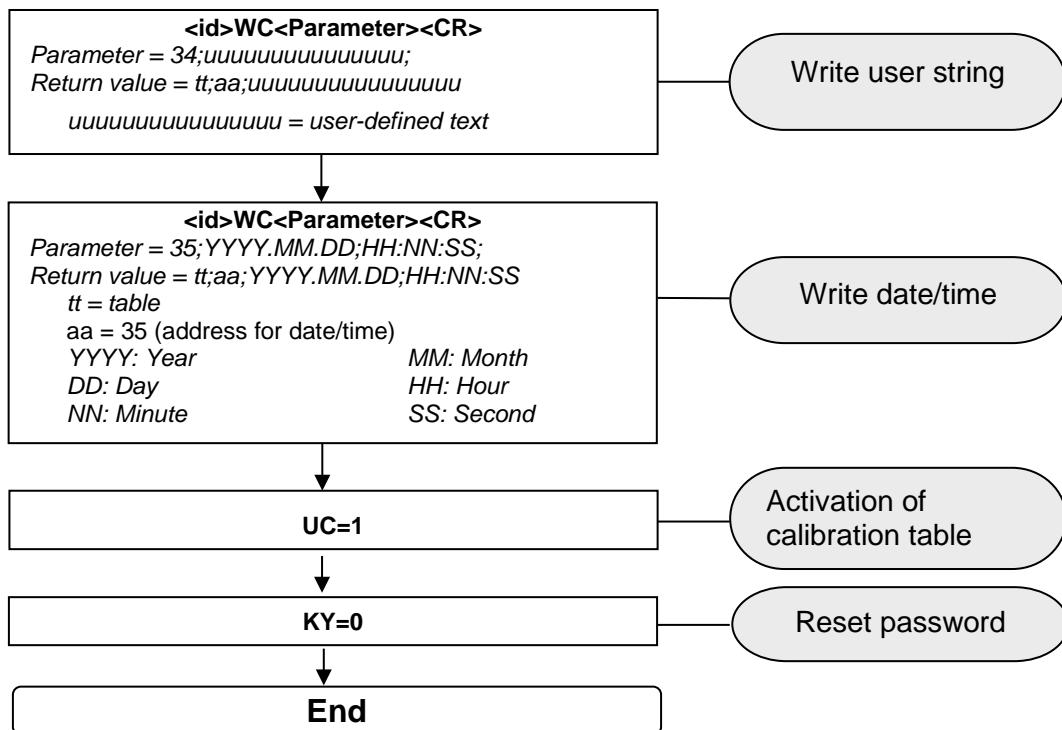

## 5 Integrated Corrections

---

The measured values for wind velocity and air pressure are corrected in the transmitter and can be queried with the measured value telegram 3.

The following corrections are implemented:

- Correction of the wind velocity depending on the air pressure.

### 5.1 Correction of the Wind Velocity Depending on the Air Pressure

The rotational velocity of the cup star depends on the air density and thus on the air pressure. The correction of this dependency is done in a pressure range of 700hPa to 1100hPa.

## 6 Recommendation Side Selection / Standard Installation

---

In general, wind measuring instruments are supposed to record wind conditions over a large area. According to international regulations, the surface wind should be measured at a height of 10m above even open terrain, in order to achieve comparable values. An open terrain is defined as terrain where the distance between the wind-measuring instrument and the next obstacle is at least ten times the height of this obstacle (acc. to VDI 3786 sheet 2 as well as Guide to Meteorological Instruments and Methods of Observation, Sixth Edition, WMO-No. 8). If this regulation cannot be fulfilled, the measuring instrument should be installed at a height at where the measurement values are not influenced by any local obstacles. In any case, the measuring instruments should be installed at a height of 6 ... 10m above the mean height of the buildings or trees in the vicinity. If it is necessary to install the instrument on a roof, it should be installed in the center of the roof in order to avoid any preferential directions.

## 7 Installation

---

**Attention:**

***Storing, mounting, and operation under weather conditions is permissible only in vertical position, as otherwise water can get into the instrument.***

---

**Note:**

*When using fastening adapters (angle, traverses, etc.) please take a possible effect to the measuring values by shading into consideration.*

---

**Attention:**

***The device may only be supplied with a power supply of the "Class 2, limited power".***

## 7.1 Mechanical Mounting

### Note:

The wiring must be prepared so far, that plug and cable have been pushed through instrument carrier, mast, traverse etc., and can be connected to the wind transmitter at the moment of the „Mechanical Mounting”, described in the following (please refer also to chapter 7.2).

The wind transmitter must be mounted on an instrument carrier, which is suited for the measurement. For dimensions of wind transmitter please refer to 15. dimension diagram.

Suitable instrument carriers are masts, tubes, traverses, arms, adapters, adapters of POM for isolated mounting, which correspond to the mounting dimensions of the wind transmitter, and to the static requirements.

The inner diameter of the instrument carrier should be  $\geq 20\text{mm}$  based on plug- and cable feed-through.

If the north alignment is carried out by compass, please consider the local declination (= deviation of direction of the magnetic needle from the true north), and local magnetic interferences (e.g. hardware, electric cable).

For alignment aid and for easy changing / replacement without readjustment:

North-ring (accessory 509619):

The optional north ring part. no. 509619 can be used to mount the wind transmitter. The north ring serves as an alignment aid and for easy changing / replacement without having to re-adjustment of the north direction of wind indicators. The north ring uses the north borehole of the mast holder for this. See 15. dimension diagram.

When aligning the wind transmitter on a moving object (e.g. vehicle, wind wheel, ship etc.) please consider that the “north point” to be determined, might possibly be located on the object.


The wind transmitter must be mounted on an instrument carrier, which is suited for the measurement. For dimensions of wind transmitter please refer to chapter 15.

**Tools:**

Hexagon socket wrench SW3  
(Allen key).

**Procedure:**

1. Lead a prepared cable with assembled plug through the bore hole of mast, tube, arm etc., and connect it to the wind transmitter.
2. Put wind transmitter on mast, tube, arm etc.
3. Align wind transmitter to "north".  
**(procedure see chapter 7.1.1)**
4. Safeguard the wind transmitter by two M6-Allen head screws.

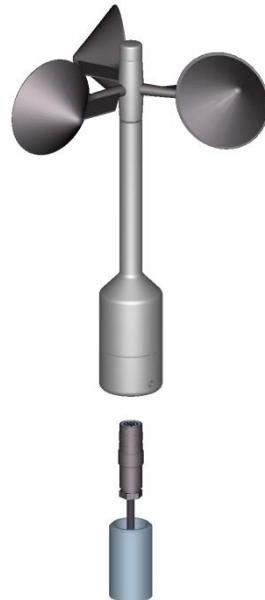

### 7.1.1 North Alignment


For the precise determination of the **Inclination angle** the Wind Transmitter must be aligned **northwards** (geographical north).

**Tools:**

Hexagon socket wrench size 3  
(Allen key).

**Procedure:**

1. Detect a prominent object in the surrounding area (tree, building etc.) in north direction by means of a compass.
2. Via the north marking (N) and an imaginary north-south axis the Wind Transmitter is to be located on the prominent object.
3. Align Wind Transmitter.  
The north marking must indicate to the geographic north.
4. In case of match the wind transmitter is to be secured by an M6- hexagon socket screw.

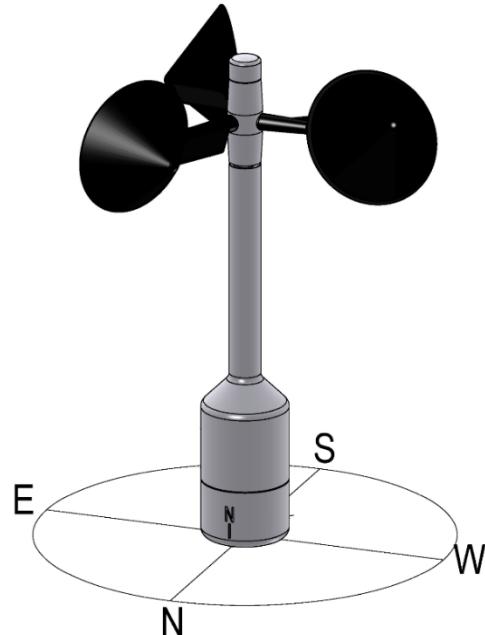

## 7.2 Electrical Mounting

### 7.2.1 Cable

Solder a shielded cable with diameter 7-8mm and a core cross-section of 0.5...0.75mm<sup>2</sup> to the enclosed coupling socket.

- The number of necessary wires is given in the connection diagram (chapter 7.3).

#### 7.2.1.1 Cable Recommendation

No. of wires/ diameter / type / cable diameter
CABLE 8x0.5mm <sup>2</sup> LIYCY BLACK, UV- resistant, Ø 7.6mm

### 7.2.2 Cable Shield





The connection of the cable shield between sensor and data acquisition device should be selected in way, that in case of over-voltages no equalizing currents will flow that might destroy the electronic components.

The connection of the cable shield should depend on the selected isolated, or respectively, non-isolated mounting of the sensors.

### 7.2.2.1 Connection recommendation for the cable shield

Sensor Carrier	Sensor	Shielding / Ground	Lightning Protection
1. Metallic measurement mast, grounded	<b>Isolated</b> mounting at the measuring mast (e.g. by non-metallic brackets, holder etc. or by metallic brackets, holder etc. with isolated plastic adaptors).	Apply the cable shield between sensor and data acquisition device (e.g. datalogger) both-sided. Ground data acquisition device.	Mount metallic lightning protection rod on the mast. Alternatively: Install separate lightning protection rod beside the measurement mast.
2. Metallic measurement mast, grounded	<b>Non-isolated</b> mounting at the measurement mast (e.g. by metallic brackets, holders etc.).	Apply cable shield between sensor and data acquisition device (e.g. datalogger) only one-sided at the acquisition device. Ground data acquisition device.	Mount metallic lightning protection rod on the mast in <b>isolated condition</b> , and ground lightning protection rod. Alternatively: Install separate lightning protection rod beside the measurement mast.
3. Metallic measurement mast, not grounded (mounted in isolated condition, e.g. on the attic)	<b>Non-isolated</b> mounting at the measurement mast (e.g. by metallic brackets, holders etc.).	Apply the cable shield between sensor and data acquisition device (e.g. datalogger) both-sided. Ground data acquisition device.	Mount metallic lightning protection rod on the mast in <b>isolated condition</b> , and ground lightning protection rod. Alternatively: Install separate lightning protection rod beside the measurement mast.
4. Non-metallic measuring mast (=isolated)	Mounting at the measurement mast (e.g. by metallic brackets, holders etc.).	Apply the cable shield between sensor and data acquisition device (e.g. datalogger) both-sided. Ground data acquisition device.	Mount metallic lightning protection rod on the mast, and ground lightning protection rod. Alternatively: Install separate lightning protection rod beside the measurement mast.

### 7.2.3 Plug and Cable Mounting
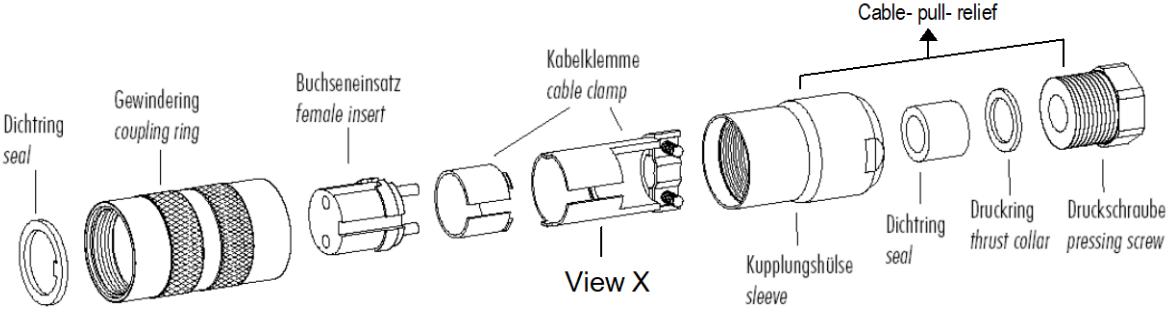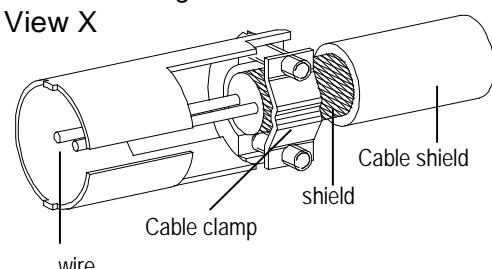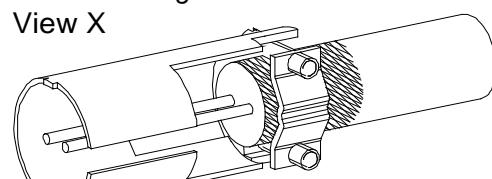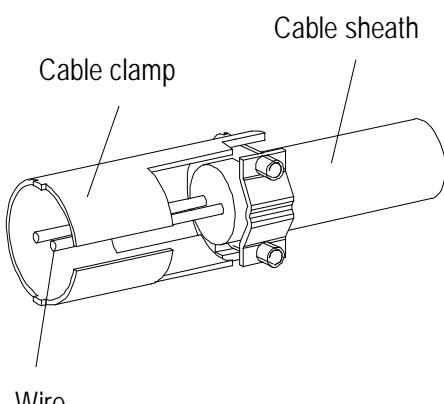
<p>Coupling socket, Type: Binder, Serial 423, EMC with cable clamp</p> 	
<p>Cable connection: <b>with</b> cable shield</p>	
<ol style="list-style-type: none"> <li>Stringing parts on cable acc. to plan given above.</li> <li>Stripping cable sheath 20mm, cutting uncovered shield 15mm, stripping wire 5mm.</li> </ol> <p><b>Cable mounting 1</b> Putting shrink hose or insulating tape between wire and shield.</p> <p><b>Cable mounting 2</b> If cable diameter permits, put the shield backward on the cable sheath.</p> <ol style="list-style-type: none"> <li>Soldering wire to the insert, positioning shield in cable clamp.</li> <li>Screwing-on cable clamp.</li> <li>Assembling remaining parts acc. to upper plan.</li> <li>Tightening pull-relief of cable by screw-wrench (SW16 und 17).</li> </ol>	<p><b>Cable mounting 1</b> View X</p>  <p><b>Cable mounting 2</b> View X</p> 
<p>Cable connection: <b>without</b> cable shield</p>	
<ol style="list-style-type: none"> <li>Stringing parts on cable acc. to plan given above.</li> <li>Stripping cable sheath 20mm.</li> <li>Cutting uncovered shield 20mm.</li> <li>Stripping wire 5mm.</li> <li>Soldering wire to the insert.</li> <li>Positioning shield in cable clamp.</li> <li>Screwing-on cable clamp.</li> <li>Assembling remaining parts acc. to upper plan.</li> <li>Tightening pull-relief of cable by screw-wrench (SW16 und 17).</li> </ol>	

## 7.3 Connecting Diagram

Connection diagram acc. to chapter 7.2.2.1 no.1, 3 and 4:

Order– No. 4.3352.00.400 4.3352.00.401 4.3352.00.491 4.3352.10.400* 4.3352.10.401* 4.3352.10.491*	 <b>8 pol. Binder Steckverbindung</b> 1 2 3 4 5 6 7 8 Schirm Erde GND Data B Data A Data GND RS 485 ~ ~ Versorgung (Elektronik) 3,7...42V DC Versorgung (Heizung) 24V AC/DC 25W	View on the soldered joint of the counter plug 
---	---	--

\*Order-No. 4.3352.10.xxx (without heating) Pin 7 u. 8 are not connected

Contact	Name	Function
1	SIG	Signal (rectangle)
2	GND	Ground
3	+Us	Supply 3.7 ... 42V DC
4	Data-	RS485 Data -
5	Data+	RS485 Data +
6	Data GND	RS485 GND
7	HZG	Heating supply: voltage: 24V AC/DC power: 25W
8	HZG	

### Note:

The signal "Data GND" (pin 6) is internally connected via a 47ohm resistor to the supply ground (pin 2)!

## 8 Maintenance

---

If properly installed, the instrument requires no maintenance. Heavy pollution can lead to blockage of the slot between the rotating and the stable parts of the transmitter. Thus, it is advisable to remove the accumulated dirt from the instrument.

### Cleaning

For the cleaning of the device should use a damp cloth without chemical cleaning agents are used.

Certain symptoms of wear and tear can appear on the ball bearings after years of use. These symptoms are expressed in a lowered sensitivity of response, standstill or run-noises of the ball bearings. In case that such disturbances might occur, we recommend to return the instrument - in original package - to the factory for maintenance work.

---

#### **Note:**

*Please use original packing during transport of instrument.*

*We recommend the threads of the plugs with a suitable corrosion inhibitor to protect against corrosion.*

---

## 9 Firmware Version / Update

---

The firmware update can be carried out using the “ThiesDeviceUtility” program (see also 10 Bootloader). This program can be downloaded and installed from the THIES homepage. The firmware files are provided directly by Thies. A firmware update should only be carried out before the sensor is calibrated.

Influences of updates on the calibration cannot always be excluded, the assessment and the extent of the influence is customer-specific depending on calibration type, certification and application. We will check this specifically on request. With updates, no parameters or calibration data are deleted or overwritten. A software update can cause a calibration certificate to lose its validity.

When updating the firmware, care must be taken to ensure that the correct version is loaded onto the sensor. For this purpose, the currently installed firmware version must be read out before the update. With the help of command LL the existing software version as well as existing firmware can be read out and the corresponding update version can be selected.

The firmware files are provided directly by Thies on request with the specification of software version (FW version) and firmware version (Required FW filename).

The following table shows the options for updating the firmware in the wind sensor.

		Update on version ...			
		V02.02	V03.08	V04.xx	V05.xx
Update from version...	V01.07 up to V02.01	X <sup>1</sup>	- <sup>2</sup>	- <sup>2</sup>	- <sup>2</sup>
	V02.03 up to V03.07	- <sup>2</sup>	X <sup>1</sup>	- <sup>2</sup>	- <sup>2</sup>
	at start V04.00	- <sup>2</sup>	- <sup>2</sup>	X <sup>1</sup>	X <sup>1</sup>
	at start V05.00	- <sup>2</sup>	- <sup>2</sup>	- <sup>2</sup>	X <sup>1</sup>

**X<sup>1</sup>:** Update is possible

**2):** Update is not allowed

## 10 Bootloader

---

The Software in the device consists of two components:

- bootloader
- firmware

The program part "Bootloader" cannot be changed and is performed each time the device is started. The behavior of the boot loader depends on the parameter "FB" (fast boot):

### **Command: FB=0**

The bootloader waits approx. 10s for the receipt of the new firmware via XMODEM protocol. The symbol "C" is output every second. After receiving the new firmware or after the 10s have elapsed, the firmware is started.

### **Command: FB=1**

The bootloader immediately starts the firmware.

To transmit the firmware, the XMODEM CRC protocol with a user data length of 128 bytes per packet is used. The interface is operated with 9600 baud, 8 data bits, no parity and one stop bit (9600,8, N, 1).

For assisting the parameter settings and/or special configurations there is our cost-free Device Utility Tool art.-no. 9.1700.81.000 available for download on our homepage. Please download the tool with following link.

Link: <https://www.thiesclima.com/de/Download/>

In the section "General", the program "Thies Device Utility".

## 11 Interface

---

The interface to the wind transmitter consists of an RS485 connection (half duplex mode) with the following data format:

- 9600 baud (the baud rate can be set with the **Command BR**)
- 8 data bits
- No parity
- 1 stop bit
- Data in ASCII format (command interpreter: THIES)
- Data in binary format (command interpreter: MODBUS RTU)

The behavior (configuration) of the wind transmitter can be changed with the commands available (see **Commands and Description**). For the command interpreter of the type THIES, the query of the measured values is done with the **Command TR**.

For the start of the wind transmitter, the character string "WG, software version and serial number" is output.

Example:    WG THIES ADV X  
             v01.09  
             0007140006

---

**Note:**

*The start message is output at the set baud rate (see "Command BR") and the data format 8N1 (8 data bits, no parity, 1 stopbit)!*

---

## 11.1 Command Interpreter THIES

The wind transmitter is equipped with the command interpreter from the type THIES that can change the behavior of the device. E.g. the averaging period for the wind velocity can be changed. Basically, the command has the following structure:

- <id><Command><CR> (No parameter: is used for querying the set parameter).
- <id><Command><Parameter><CR> (With parameter: is used to set a new parameter).

id:	identification number ("00" to "99")
Command:	command with 2 characters (see command list)
Parameter:	parameter value with 1 to 10 characters (decimal value in ASCII representation)
<CR>:	Carriage Return (13 <sub>dec</sub> ; 0x0D)

With the identification number 'id', several devices can be operated together with a bus. For this purpose, each device receives an individual 'id' (see **Command ID**).

A sent command is acknowledged with a corresponding echo telegram. The echo telegram starts with a "!", followed by the id, the command and the set value. In the end, there are the characters "carriage return" and "new line".

Commands can either be sent with or without parameters. When no parameter is entered, the set value is output.

*Example:*    00BR<CR>  
              !00BR00005<CR>

If a command is sent with parameter, the parameter is checked. If the parameter is valid, it is saved and indicated in the "echo telegram". If the parameter is invalid, the parameter is ignored and the set value is output in the "echo telegram".

*Examples:*

00BR00005<CR>	sending command.
!00BR00005<CR>	Echo telegram (parameter valid and password OK).
00BR00004<CR>	sending command.
!00BR00005<CR>	Echo telegram (Parameter valid but wrong key).

**Note:**

***With the command TR, the measured sensor values can be queried. Then, the wind transmitter will not respond with the echo telegram but with the queried data telegram!***

In order to avoid an accidental parameter setting, some commands (see command list) are protected by a password. This password must be sent prior to the actual command.

*Example: Change of the baud rate*

00KY234<CR> enable commands of the user level

00BR4<CR> set baud rate to 4800

!00BR00004<CR> baud rate set to 4800

The wind transmitter supports 3 different password levels.

- User level (password: "234")
- Calibration value level
- Administrator level

**Attention:**

***The commands protected by a password are enabled until one of the following conditions is fulfilled:***

- switching of the supply voltage***
- the command 00KY0<CR> is sent***
- no new command is sent for at least 120s***

### 11.1.1 Telegram Formats

Data is output on request by the command TR. The following telegrams can be selected:

- Measured value telegram (parameter = 1)
- Measured value telegram 2 (parameter = 2)
- Measured value telegram 4 (parameter =4)
- Measured value telegram 5 (parameter =5)
- Measured value telegram 6 (parameter =6)
- Measured value memory telegram (parameter = 30)

The calculation of the check sum, the composition of the status word and the control / separation characters used in the telegrams are listed below:

#### Control characters:

CR – Carriage Return (13<sub>dec</sub>; 0x0D)

LF – Line Feed (10<sub>dec</sub>; 0x0A)

STX – Start of Text (2<sub>dec</sub>; 0x02)

ETX – End of Text (3<sub>dec</sub>; 0x03)

#### Separation characters:

Separation character between the single measured values in the string is the semicolon ':'.

The check sum separation character is the asterisk '\*'.

### 11.1.2 Check Sum:

The check sum is the XOR link of all characters between <XTX> and the byte <\*>. The asterisk is the separation character of the check sum and is not contained in the check sum.

### 11.1.3 Status Information:

Within the wind transmitter, the status word (32bit) is available which provides information about the condition of the transmitter. The measured values are submitted to a plausibility check and shown in the status word.

Bit number	Function	Description
Bit 0	Wind velocity jump	= 1 if the difference between the wind velocity between 2 subsequent measured values in the second interval exceeds 10m/s.
Bit 1	Calm	= 1 if the wind velocity remains for at least 3 hours at 0m/s without interruption.
Bit 2	Measured value correction	= 1 if the measured wind velocity is outside the defined table range.
Bit 3	Watchdog Reset	= 1 after a reset conditioned by the watchdog.
Bit 4	Filling level averaging buffer < 100%	= 1, averaging buffer has not yet filled completely. After a restart of the wind transmitter, this bit remains set until the averaging buffer has been filled completely.
Bit 5...8	Calibration table	Bits 5 to 8 show the calibration table used for the calculation of the wind velocity. 0000 : Standard curve 0001 : Calibration table 1 0010 : Calibration table 2 0011 : Calibration table 3 0100 : Calibration table 4 0101 : Calibration table 5 0110 : Calibration table 6 0111 : Calibration table 7 1000 : Calibration table 8 1001 : Calibration table 9 1010 : Calibration table 10
Bit 9	Vcc voltage	=1, Vcc voltage outside admissible range.
Bit 10	3V voltage	=1, 3V voltage outside admissible range.
Bit 11	Pressure sensor	=1, measured values from the pressure sensor are faulty.
Bit 12	Acceleration sensor	=1, measured values from the acceleration sensor are faulty.
Bit 13	EEPROM parameter	=1, internal EEPROM parameters invalid.
Bit 14	EEPROM parameter	=1, internal EEPROM parameters contain the standard values.
Bit 15	New FW	=1, last restart was done with new firmware.
Bit 16	-	Internal use.

Bit number	Function	Description
Bit 17...19	Source mean value calculation	The bits 17 to 19 show the wind velocity used for the calculation of the mean values. 000: Wind velocity calculated by the standard characteristic curve. 001: Wind velocity calculated by the calibration charact. curve. 010: Wind velocity calculated by the calibration table and compensated concerning air pressure.
Bit 20...31	-	-

Table 1 : Status Word

## 11.2 Commands and Description

The following table lists the available commands and the corresponding password for reading and writing:

Command	Initial value Factory setting	MODBUS Register address	Description	Password Reading <sup>1</sup> / Writing <sup>2</sup>	
<b>Command BR</b>	96	40005	Baud rate	Without	User
<b>Command BT</b>	0	40019	Bus termination	Without	User
<b>Command CI</b>	0/1 <sup>1</sup>	40013	Command interpreter	Without	User
<b>Command CK</b>	137	-	Password for writing access to calibration tables	Without	User or CK
<b>Command FB</b>	1	40001	Quick start mode	Without	User
<b>Command FO</b>	4	40025	Frequency output	Without	User
<b>Command HP</b>	500	40041	Target value for the temperature control unit	Without	User
<b>Command HT</b>	1	40017	Mode of the heater control	Without	User
<b>Command ID</b>	0/1 <sup>2</sup>	40003	ID number	Without	User
<b>Command KX</b>	0	-	Key /password	Without	User or KX
<b>Command KY</b>	0	40009	Key/password	Without	Without
<b>Command LL</b>	-	-	Version information	Without	Without
<b>Command MI</b>	10	40027	Averaging interval	Without	User
<b>Command MS</b>	0	-	Source mean value calculation	Without	User
<b>Command OH</b>	-	40021	Read operating parameters	Without	Without
<b>Command RC</b>	-	<sup>3</sup>	Read entry from calibration table	Without	Without
<b>Command RD</b>	20	-	Response delay	Without	User

<sup>1</sup> The device version 4.3352.x0.400 is delivered with 0 (THIES- Interpreter), the version 4.3352.x0.401 is delivered with 1 (MODBUS RTU).

<sup>2</sup> The device version 4.3352.x0.400 is delivered with ID0, the version 4.3352.x0.401 is delivered with ID1. If the sensor includes an additional label with the ID, the ID of the label is valid.

<sup>3</sup> For reading the entries of the calibration table please see chapter 9.3.3 Calibration table in the MODBUS-RTU Interpreter.

Command	Initial value Factory setting	MODBUS Register address	Description	Password Reading <sup>1</sup> / Writing <sup>2</sup>	
<b>Command RS</b>	-	-	Reset	Without	User
<b>Command SF</b>	0	40043	Frame format	Without	User
<b>Command SH</b>	0	40039	Station height	Without	User
<b>Command SM</b>	0	-	Power saving mode	Without	User
<b>Command SN</b>	-	40007	Read serial number	Without	Without
<b>Command SR</b>	1	40029	Scanning rate (1s, 1/2s, 1/4s)	Without	User
<b>Command SV</b>	-	45005	SW version	Without	Without
<b>Command TR</b>	-	-	Telegram query	Without	Without
<b>Command UC</b>	0 <sup>4</sup>	40031	Selection calibration table	Without	User
<b>Command WC</b>	-	-	Write entry into calibration table	Without	Calibration data or CK

**Table 2 : Command List**

<sup>4</sup> When a calibration table is archived in the sensor, the parameter UC must be set to one for activating the table. This can be carried out in a calibration laboratory with the calibration.

### 11.2.1 Command BR

<id>BR<parameter><CR> Setting the baud rate

Access: reading / writing

Description: With the command BR, the desired baud rate is set.

Parameter type: unsigned integer

Parameter:

Parameter	Description
12	1200baud
24	2400baud
48	4800baud
96	9600baud
192	19200baud
384	38400baud
576	57600baud

Type return value: unsigned integer

Return value: see parameter

Value range: 12 / 24 / 48 / 96 / 192 / 384 / 576

Initial value: 96

### 11.2.2 Command BT

<id>BT<parameter><CR> Bus termination

Access: reading / writing

Description: With the command, the RS485 interface can be interconnected with a 120 Ohm wave terminating resistor (bus termination).

Parameter type: unsigned integer

Parameter: 0: Termination off  
1: Termination enabled (120 Ohm)

Type return value: unsigned integer

Return value: see parameter

Value range: 0 / 1

Initial value: 0

### 11.2.3 Command CI

<id>CI<parameter><CR> Selection of the command interpreter.  
 Access: reading / writing  
 Description: With the command CI, the desired command interpreter is set.

**Note:**

*If the identification number (ID) is bigger than 98, it is automatically set to 0 when switching over into the THIES interpreter!*

**Note:**

*If the identification number (ID) equals 0, a switch-over into the MODBUS-RTU interpreter is not possible!*

Parameter description:

Parameter	Description
0	THIES
1	MODBUS RTU

Value range: 0 to 1  
 Initial value: 0/1 depending on device version  
                   0 for 4.3352.x0.400, 1 for 4.3352.x0.401

### 11.2.4 Command CK

<id>CK<parameter><CR> Password for writing access to calibration tables.  
 Access: writing  
 Description: With the command, the password is set for writing access to the calibration tables (see command WC). The password must be set 2 consecutive times within a time frame of 60 seconds.  
                   If the password has been changed once, the current password must be set before changing it again.  
 Parameter type: unsigned integer  
 Parameter: 1...4294967295  
 Type return value: unsigned integer  
 Return value: see parameter  
 Value range: 1...4294967295  
 Initial value: 137

### 11.2.5 Command FB

<id>FB<parameter><CR>	Quick start mode
Access:	reading / writing
Description:	The command selects the quick start mode or the set mode is queried.
Parameter type:	unsigned integer
Parameter:	0: Quick start mode off 1: Quick start mode on
Type return value:	unsigned integer
Return value:	see parameter
Value range:	0...1
Initial value:	1

### 11.2.6 Command FO

<id>FO<parameter><CR>	Frequency output
Access:	reading / writing
Description:	The command enables or disables the frequency output. When no parameter is entered, the set value is queried.
Parameter type:	unsigned integer
Parameter:	0: deactivate frequency output 1: Output of measured frequency. The pulses from the internal processor are acquired and re-output. The delivered frequency is identical with the setting 7, with the difference that the pulse-interval-ratio and the Jitter of the single current pulse are optimized. 2: Output of the wind velocity by using the standard characteristic curve ( $f_a = WV^* 10$ ) Example: $WV=10,1\text{m/s} \rightarrow f_{out}=101\text{Hz}$ 3: Output of the wind velocity by using the latest calibration table ( $f_a = WG^* 10$ ) Example: $WV=10,1\text{m/s} \rightarrow f_{out}=101\text{Hz}$ 4: Output of the wind velocity by using the current calibration table compensated concerning air pressure ( $f_a = WG^* 10$ ) Example: $WV=10,1\text{m/s} \rightarrow f_{out}=101\text{Hz}$ 5: reserved 6: reserved 7: Direct output of the measured pulse signals without application of the calibration table or correction. In this mode the pulse output behaves identically to 4.3351.X0.000
Type return value:	unsigned integer
Return value:	see parameter
Value range:	0...7
Initial value:	4

### 11.2.7 Command HP

<id>HP<parameter><CR>	Reference variable Sensor temperature control unit.
Access:	reading / writing
Description:	The pressure and acceleration sensors are thermally coupled and can be heated. The "HP" command sets the setpoint for the Sensor temperature controller. The information is given in °C with one decimal place.
Parameter type:	unsigned integer
Parameter:	0...600: Reference variable 0...60.0°C 65535: Heating of pressure and acceleration sensors is switched off

**Note:**

***Disabled the heater of pressure and acceleration sensors has no influence on the IEC conformity. Furthermore, exist the classification according to IEC.***

Type return value:	unsigned integer
Return value:	see parameter
Value range:	0...600 / 65535
Initial value:	500

### 11.2.8 Command HT

<id>HT<parameter><CR>	Mode of the housing heater control.
Access:	reading / writing
Description:	The command sets the mode for the housing heater (only possible at 4.3352.00.40x)

**Note:**

***With this command, the galvanically separate housing heater is activated at the contacts 7/8 or deactivated.***

Parameter type:	unsigned integer
Parameter:	0: Heater off 1: Heater on (controlled to ~ 4°C)
Type return value:	unsigned integer
Return value:	see parameter
Value range:	0...1
Initial value:	1

### 11.2.9 Command ID

<id>ID<parameter><CR>	Identification number.
Access:	reading / writing
Description:	This command sets the identification number (THIES interpreter) or the slave address (MODBUS RTU interpreter). Only if the id included in the command corresponds to the one set in the wind transmitter, a response telegram is sent. One exception is the generic 'id' where all wind transmitters respond (THIES interpreter). After changing the 'id', the device responds immediately with the new 'id'.
Parameter type:	unsigned integer
Parameter:	99 generic 'id' (THIES interpreter) 0 Broadcast slave address (MODBUS RTU interpreter)
Type return value:	unsigned integer
Return value:	see parameter
Value range:	0 to 99 (THIES interpreter) 1 to 247 (MODBUS RTU Interpreter)
Initial value:	0 (THIES interpreter) for sensor 4.3352x0.400 1 (MODBUS RTU Interpreter) for sensor 4.3352.x.0.401

### 11.2.10 Command KX

<id>KX<parameter><CR>	With the command KX the command KY password can be changed
Access:	writing
Description:	The command KX sets the password for write access to the parameters of command KY. A value other than 0 overwrites or replaces the password levels "User" and "Calibration data" (see command KY).
The password must be set 2 times in succession, in a time window of 60 seconds.	
	Once the password has been changed, the current password must be set before changing again. The password is entered using the KY command. If the parameter for the KX command is 0, then the password levels "User" and "Calibration data" listed for the KY command are valid.
Parameter type:	unsigned integer
Parameter:	0...4294967295
Type return value:	unsigned integer
Return value:	see parameters
Value range:	0...4294967295
Initial value:	0 (please note following note)

Sample:

- 1) Key „User“ set  
00KY234  
!00KY234
- 2) User defined password set to 1“(1. Set)  
00KX1
- 3) User defined password set to 1 (2. Set)  
00KX1  
!00KX00001
- 4) Test the user defined password to chance the ID  
00KY1  
!00KY00001  
00ID1  
!01ID00001

**Note:**

***After updating the firmware to version V3.02, the parameter "KX" contains the value 4294967295!***

### 11.2.11 Command KY

<id>KY<parameter><CR> Key/password

Access: reading / writing

Description: With this command, the value for the key (password) is set. The following 3 password levels are possible:

- Query (reading)
- User (general settings)
- Calibration data (access to the calibration data sets)
- KX (general settings / access to the calibration data sets)

Parameter type: unsigned integer

Parameter:

Parameter	Description
0	Query
234 <sup>1</sup>	User
137 <sup>1</sup>	Calibration data (see command CK)
KX <sup>2</sup>	User defined password

- 1) The key „234“ and „137“ are valid, if parameter KX the value 0 include.
- 2) Include parameter KX the value unlike 0, then replace the value both keys „234“ (User) and „137“ (Calibration data).

Type return value: unsigned integer

Return value: see parameter

Value range: 0, 137, 234, KX

Initial value: 0

**Note:**

**After changing the parameter "KX" to a value other than 0, all parameters (general settings and calibration data) can only be changed by specifying the password set with "KX"!**

**Note:**

**Please contact the manufacturer if you have lost the password ("KX")!**

### 11.2.12 Command LL

<id>LL<parameter><CR> Version information  
 Access: reading / writing  
 Description: With this command the version information of the encoder is queried.  
 Parameter type: -  
 Parameter: -  
 Type return value: string  
 Return value:  
 Product description : Wind Transmitter First Class Advanced X  
 Article number : 4.3352.00.400  
 PCB version : 510230  
 Serial number : 00000000  
 HW identification : 452DB71C38344E5120202033111B11FF  
 FW version : V04.00  
 Required FW filename : 400013\_FW\_Vxxxx.hex  
 END  
 Value range: -  
 Initial value: -

**Note:**

**The command "LL" is supported from firmware version V04.00!**

### 11.2.13 Command MI

<id>MI<parameter><CR> Averaging interval  
 Access: reading / writing  
 Description: With this command, the averaging interval for floating averaging of the wind velocity is set in seconds (see Bit4 in the sensor status). Wind velocity values are logged 4 times per second (4 Hz) for averaging.  
 Parameter type: unsigned integer  
 Parameter: e.g. 60 → 60[s]  
 Type return value: unsigned integer  
 Return value: see parameter  
 Value range: 0...600  
 Initial value: 10

### 11.2.14 Command MS

<id>MS<parameter><CR> Source mean value calculation

Access: read / write

Description: This command is used to set the source for the calculation of the following values:

- mean value
- gust
- minimum
- standard deviation
- intensity of turbulence

Parameter type: unsigned integer

Parameter:

Parameter	Description
0	Wind velocity calculated by means of standard characteristic curve.
1	Wind velocity calculated by means of calibration table. When no calibration table is available, the value is output, which was calculated by means of the standard characteristic curve.
2	Wind velocity calculated by means of calibration table and compensated concerning air pressure. When no calibration table is available, the value is output, which was calculated by means of the standard characteristic curve.
3	reserved
4	reserved

Type return value: unsigned integer

Return value : see parameter

Value range: 0...4

Initial value: 0

### 11.2.15 Command OH

<id>OH<CR>                    Read operating parameters  
 Access: reading  
 Description: With this command, the following operating parameters can be read:  
 - Number of the operating hours.  
 - Number of revolutions.  
 - Operating time since the last reset.  
 Parameter type: unsigned integer  
 Parameter:

Parameter	Description
1	Number of the operating hours.
2	Query of the number of revolutions.
3	Query of the operating time in seconds since the last reset.

Type return value: unsigned integer / character string

Return value:

Return value	Type	Description
xxxxxxxxxx	unsigned integer	Operating hours.
xxxxxxxxxxxxxx	Character string	Number of revolutions (64bit value in hexadecimal representation).
xxxxxxxxxx	unsigned integer	Operating time in seconds since the last reset.

Value range:

-

Initial value:

-

Example:

00OH1  
 !00OH0000003987                    (=3978 hours)

00OH2  
 !00OH000000000000A43B            (=42043 revolutions)

00OH3  
 !00OH0000123887                    (=123887 seconds)

### 11.2.16 Command RC

<id>RC<parameter><CR> Read calibration table.

Access: reading

Description: With the command, the table indicated in the parameter is read. The value returned by the command RC depends on the parameter:

Parameter type: unsigned integer

Parameter:

Parameter	Description
0 ... 10	Table (0 ... 10) 0: Standard curve 1: Table 1 2: Table 2 ... 9: Table 9 10: Table 10
99	Time stamp (date/time) of all tables (empty tables, i.e. unfilled tables give the following time stamp: tt;2010.00.00;00:00:00;)

Type return value: Character string

Return value:

Transfer parameter	Return value	
	ASCII representation	Description
1...10	<STX> sssss[1];iiiii[1]; sssss[2];iiiii[1]; ... sssss[32];iiiii[32]; xxxxxxxxxx; uuuuuuuuuuuuuuuu; YYYY.MM.DD;HH:NN:SS <ETX>	32 sampling points in the table + calibration certificate number + date/time sssss: Target value in 0.01[m/s] iiiii: Actual value in 0.01[m/s] xxxxxxxxxx: Calibration certificate number uuuuuuuuuuuuuu: User string with 16 characters YYYY: Year MM: Month DD: Day HH: Hour NN: Minute SS: Second
99	<STX> tt;YYYY.MM.DD;HH:NN:SS; tt;YYYY.MM.DD;HH:NN:SS; tt;YYYY.MM.DD;HH:NN:SS; tt;YYYY.MM.DD;HH:NN:SS; tt;YYYY.MM.DD;HH:NN:SS; tt;YYYY.MM.DD;HH:NN:SS; tt;YYYY.MM.DD;HH:NN:SS; tt;YYYY.MM.DD;HH:NN:SS; tt;YYYY.MM.DD;HH:NN:SS; <ETX>	Date/time of all tables (1...10) tt: Table YYYY: Year MM: Month DD: Day HH: Hour NN: Minute SS: Second

Transfer parameter	Return value	
	ASCII representation	Description
unequal 1...10 / 99	<STX>error<ETX>	

Value range:

-

Initial value:

-

Example:

00RC01

```
<STX>0000;0000;0242;0242;0484;0484;0726;0726;0968;0968;
1210;1210;
1452;1452;1694;1694;1936;1936;2178;2178;2420;2420;
2662;2662;2904;2904;3146;3146;3388;3388;3630;3630;3872;3
872;
4114;4114;4356;4356;4598;4598;4840;4840;5082;5082;5324;5
324;
5566;5566;5808;5808;6050;6050;6292;6292;6534;6534;6776;6
776; 7018;7018;
7260;7260;7502;7502 ;0000022228;2013.09.03;16:00:00
<ETX>
00RC99
<STX>2013.09.09;12:00:00;2010.00.00;00:00:00;2010.00.00;0
0:00:00;2010.00.00;00:00:00;2010.00.00;00:00:00;2010.00.00;
00:00:00;2010.00.00;00:00:00;2010.00.00;00:00:00;2010.00.00
;00:00:00;2010.00.00;00:00:00;<ETX>
```

### 11.2.17 Command RD

<id>RD<parameter><CR> Response delay  
 Access: reading / writing  
 Description: The response delay between receiving a command and sending the response is queried or set with the RD command.  
 Parameter type: unsigned integer  
 Parameter: Delay in milliseconds  
 e.g.. 20 → 20[ms]  
 Type return value: unsigned integer  
 Return value: see parameter  
 Value range: 0...50  
 Initial value: 20

### 11.2.18 Command RS

<id>RS<parameter><CR> Reset  
 Access: reading / writing  
 Description: The RS command queries the reset source (le-send without parameters) or performs a reset / restart (writing with parameter).  
 The following reset sources can be output:  

PORF	(Power On Reset Flag)
EXTRF	(External Reset Flag)
BORF	(Brownout Reset Flag)
WDRF	(Watchdog Reset Flag)
PDIRF	(Program and Debug Interface Reset Flag)
SRF	(Software Reset Flag)

 Parameter type: unsigned integer  
 Parameter: 1 Watchdog Reset  
 2 Software Reset  
 Type return value: unsigned integer  
 Return value: see parameter  
 Value range: 1 / 2  
 Initial value: -

### 11.2.19 Command SF

<id>SF<parameter><CR> Frame format  
 Access: reading / writing  
 Description: The command SF sets the frame format of the interface.  
 Parameter type: unsigned integer  
 Parameter:  
     0: 8N1 (8 data bits, no parity, 1 Stopbit)  
     1: 8N2 (8 data bits, no parity, 2 Stopbits)  
     2: 8E1 (8 data bits, straight parity, 1 Stopbit)  
     3: 8E2 (8 data bits, straight parity, 2 Stopbits)  
     4: 8O1 (8 data bits, uneven parity, 1 Stopbit)  
     5: 8O2 (8 data bits, uneven parity, 2 Stopbits)  
 Type return value: unsigned integer  
 Return value: see parameter  
 Value range: 0...5  
 Initial value: 0

### 11.2.20 Command SH

<id>SH<parameter><CR> Station height  
 Access: reading / writing  
 Description:  
     With the command, the station height on the site is set on the site of the anemometer.  
     This value is used for the calculation of the relative air pressure.  
     The information of the height is given in meter. Indication of station height is not necessary for air pressure compensation of wind velocity.  
 Parameter type: unsigned integer  
 Parameter:  
     Height above sea level in meters  
     0...3000: Station height in meters (basis for the calculation of the relative air pressure)  
 Type return value: unsigned integer  
 Return value: see parameter  
 Value range: 0...3000  
 Initial value: 0

### 11.2.21 Command SM

<id>SM<parameter><CR> Power saving mode

Access: reading / writing

Description: The command enables reading and setting the power saving mode.

Parameter type: unsigned integer

Parameter: 0: all modules active

1: µC and interfaces disabled  
(frequency output active, when FO = 7)

After activation of power-saving mode the sensor cannot be operated via the serial interface after approx. 30sec. After a restart the interface is active for 30 sec.

Parameter HT0 should be set in the power-saving mode.

2: µC active with reduced CPU frequency. RS485 interface active. Accelerometer deactivated. Frequency output only with mode FO = 7.

Type return value: unsigned integer

Return value: see parameter

Value range: 0...2

Initial value: 0

**Note:**

**After resetting parameter 2 ("FO2") to parameter 0 ("FO0"), the encoder must be restarted! A restart can be carried out with the "RS2" command (password level "User" / KY234).**

### **11.2.22 Command SN**

<id>SN<parameter><CR> Serial number  
 Access: reading  
 Description: The command enables reading the serial number.  
 Parameter type: -  
 Parameter: -  
 Type return value: unsigned integer  
 Return value: xxxxxxxxx: Serial number  
 Value range: xxxxxxxxxx  
 Initial value: -

### **11.2.23 Command SR**

<id>SR<CR> Scanning rate  
 Access: reading / writing  
 Description: With the command SR, the scanning rate for the measured value logging is read or set. This command refers exclusively to the scanning interval of the measuring values for the measuring value telegram, **see 12.6** and not to the instantaneous values.  
 Parameter type: unsigned integer  
 Parameter:  
     0: 1s  
     1: 0.5s  
     2: 0.25s  
 Type return value: unsigned integer  
 Return value: see parameter  
 Value range: 0...2  
 Initial value: 1

### **11.2.24 Command SV**

<id>SV<CR> SW version  
 Access: reading  
 Description: With the command SV, the software version number can be read.  
 Parameter type: -  
 Parameter: -  
 Type return value: unsigned integer  
 Return value: xxyy (xx: main version number, yy: Secondary version number)  
 Value range: -  
 Initial value: -

### 11.2.25 Command TR

<id>TR<parameter><CR> Measured value request.

Access: reading

Description: The command activates the one-time transfer of the current data telegram.

Parameter type: unsigned integer

Parameter:

1:	Query measured value telegram 1
2:	Query measured value telegram 2
4:	Query measured value telegram 4
5:	Query measured value telegram 5
6:	Query measured value telegram 6
30:	Query measured value memory telegram

Type return value: Character string

Return value: Character string (see **Telegram**)

Value range: 1 / 2 / 30

Initial value: -

### 11.2.26 Command UC

<id>UC<parameter><CR> Selection calibration table.

Access: reading / writing

Description: The command selects between the standard curve and the (most recent) calibration table with the highest value. Parameter UC can be set to one only when a calibration table is available.

Parameter type: unsigned integer

Parameter:

0:	Standard curve
1:	(most recent) calibration table with the highest value

Type return value: unsigned integer

Return value: see parameter

Value range: 0 / 1

Initial value: 0

### 11.2.27 Command WC

<id>WC<parameter><CR> Describe calibration table.

Access: writing

Description: With the command, the memories of the next free table are written.

After writing date/time (address 35), the table is complete and no longer be changed.

The table is selected automatically for writing access, in ascending order from table 1 to table 10.

Parameter type: Character string.

Parameter:

Transfer parameter	Return value	
	ASCII representation	Description
aa;sssss;iyyy; (aa: 1...32)	tt;aa;sssss;iyyy	Sampling points of the table tt: Table aa: Address sssss: Target value in 0.01[m/s] iyyy: Actual value in 0.01[m/s]
33;xxxxxxxxxx;	tt;aa;xxxxxxxxxx	Calibration certificate number tt: Table aa: Address xxxxxxxxxx: Calibration certificate number
34;uuuuuuuuuuuuuuuu;	tt;aa;uuuuuuuuuuuuuuuu	Date/time tt: Table aa: Address uuuuuuuuuuuuuu: User string with 16 characters
35;YYYY.MM.DD;HH:NN:SS;	tt;aa;YYYY.MM.DD;HH:NN:SS	Date/time tt: Table aa: Address YYYY: Year MM: Month DD: Day HH: Hour NN: Minute SS: Second

Type return value: Character string

Return value: see parameter

Value range: -

Initial value: -

Example: 00WC35;2013.09.02;11:24:00  
!00WC01; 35;2013.09.02;11:24:00

## 11.3 Command Interpreter MODBUS RTU

If the command interpreter MODBUS RTU is selected, the transferred bytes are interpreted according to the MODBUS specification (<http://www.modbus.org/>). In this case, the wind transmitter represents a MODBUS slave.

The data is transferred in packages in so called frames with max. 256 bytes. Each package contains a 16bit CRC check sum (initial value: 0xffff).

Slave address	Functional code	Data	CRC	
1byte	1byte	0 ... 252 byte(s)	2Bytes	
			CRC low-byte	CRC high-byte

**Table 3 : MODBUS Frame**

The following MODBUS functions are supported:

- 0x04 (Read Input Register).
- 0x03 (Read Holding Registers).
- 0x10 (Write Multiple Registers).
- 0x2B (Read Device Identification with MEI-Type 0x0E).

The wind transmitter supports writing accesses for the slave address 0 ("broadcast").

All received MODBUS requirements are checked for their validity before execution. In case of an error, the wind transmitter responds with one of the following exceptions (→MODBUS Exception Responses).

Code	Name	Meaning
0x01	ILLEGAL FUNCTION	The functional code in the request is not admissible for the register address.
0x02	ILLEGAL DATA ADDRESS	The register address in the request is not valid.
0x03	ILLEGAL DATA VALUE	The specified data in the request is not admissible.

**Table 4: MODBUS Exceptions**

### 11.3.1 Measured Values (Input Register)

All measured values of the wind transmitter occupy 32bit, i.e. 2 MODBUS register addresses. The table below shows the assignment of measured value to register address, whereby the measured values are sorted as follows:

- According to measured value type (30001 to 34999).
- In uninterrupted sequence (35001 to 39999).

Register address	Parameter name	Unit	Multipli-cator	Explanation	Data type
30001	Instantaneous value of the wind velocity, calculated with the current calibration table. When there is no calibration table existing the calculated measuring value of the standard characteristic curve is output. (35001) <sup>1</sup>	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U32
30003	Current average value of the wind velocity, calculated according command MS; unit: m/s; resolution: 0.1m/s; period: Averaging interval (→ Command MI) (35003) <sup>4</sup>	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U32
30005	Instantaneous value of the wind velocity, calculated with the standard curve (35005) <sup>1</sup>	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U32
30007	Current standard deviation of the wind velocity, calculated with the current calibration table (35007) <sup>1</sup>	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U32
30009	Current minimum value of the wind velocity of the last 1min., calculated with the current calibration table (35009) <sup>1</sup>	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U32
30011	Current gust of the wind velocity of the last 1min., calculated with the current calibration table (35011) <sup>1</sup>	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U32
30013	Wind velocity <sup>8</sup> (compensated for air pressure) (35013) <sup>1</sup>	m/s	100	Value / 100 (1 decimal place, e.g. 101=1.01m/s)	U32
30015	Reserved				U32
30017	Reserved				U32
30403	Housing interior temperature of the wind transmitter (35019) <sup>1</sup>	°C	10	Value / 10 (1 decimal place, e.g. 355=35.5°C)	S32
30801	Absolute air pressure (35021) <sup>1</sup>	hPa	100	Value / 100 (2 decimal places e.g. 105000=1050.00hPa)	U32
30803	Relative air pressure (35023) <sup>1</sup>	hPa	100	Value / 100	U32

Register address	Parameter name	Unit	Multipli-cator	Explanation	Data type
				(2 decimal places e.g. 105000=1050.00hPa)	
34811	32-bit sensor status in hexadecimal representation a: high nibble in high byte in HEX (Bit 31 ... 28) b: low nibble in high byte in HEX (Bit 27 ... 24) c: high nibble in byte 2 in HEX (Bit 23 ... 20) d: low nibble in byte 2 in HEX (Bit 19 ... 16) e: high nibble in byte 3 in HEX (Bit 15 ... 12) f: low nibble in byte 3 in HEX (Bit 11 ... 8) g: high nibble in low byte in HEX (Bit 7 ... 4) h: low nibble in low byte in HEX (Bit 3 ... 0)  Sensor status (35025) <sup>1</sup>		1	Value (no decimal place, bit coded, depending on sensor)	U32
34813	Main loop run per 1s (35027) <sup>1</sup>	1/s	1	Value (no decimal place, e.g. 2550=2550 1/s)	U32
34815	Operating time (35029) <sup>1</sup>	s	1	Value (no decimal place, e.g. 255=255s)	U32
34819	Inclination value $\theta$ Angle between the Z-axis and the vertical (35031) <sup>1</sup>	°	10	Value / 10 (1 decimal place, e.g. 240=24.0°)	S32
34821	Inclination value $\rho$ Angle between the X-axis and the horizontal (35033) <sup>1</sup>	°	10	Value / 10 (1 decimal place, e.g. 240=24.0°)	S32
34823	Inclination value $\phi$ Angle between the Y-axis and the horizontal (35035) <sup>1</sup>	°	10	Value / 10 (1 decimal place, e.g. 240=24.0°)	S32
34825	Frequency vibration measurement, X-axis (35037) <sup>1</sup>	Hz	100	Value / 100 (2 decimal places e.g. 2400=24.00Hz)	U32
34827	Acceleration vibration measurement, X-axis (35039) <sup>1</sup>	mg	1	Value (no decimal place, e.g. 24=24mg)	U32
34829	Frequency vibration measurement, Y-axis (35041) <sup>1</sup>	Hz	100	Value / 100 (2 decimal places e.g. 2400=24.00Hz)	U32
34831	Acceleration vibration measurement, Y-axis (35043) <sup>1</sup>	mg	1	Value (no decimal place, e.g. 24=24mg)	U32

Regis- ter ad- dress	Parameter name	Unit	Multipli- cator	Explanation	Data type
34833	Frequency vibration measure- ment, Z-axis (35045) <sup>1</sup>	Hz	100	Value / 100 (2 decimal places e.g. 2400=24.00Hz)	U32
34835	Acceleration vibration measure- ment, Z-axis (35047) <sup>1</sup>	mg	1	Value (no decimal place, e.g. 24=24mg)	U32
<hr/>					
35001	Instantaneous value of the wind velocity, calculated with the cur- rent calibration table. When there is no calibration table existing the calculated measuring value of the standard characteristic curve is output. (30001) <sup>1</sup>	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U32
35003	Current average value of the wind velocity, calculated accord- ing command MS; unit: m/s; res- olution: 0.1m/s; period: Averaging interval (→ Command MI) (30003) <sup>1</sup>	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U32
35005	Instantaneous value of the wind velocity, calculated with the standard curve (30005) <sup>1</sup>	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U32
35007	Current standard deviation of the wind velocity, calculated with the current calibration table (30007) <sup>1</sup>	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U32
35009	Current minimum value of the wind velocity of the last 1min., calculated with the current cali- bration table (30009) <sup>1</sup>	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U32
35011	Current gust of the wind velocity of the last 1min., calculated with the current calibration table (30011) <sup>1</sup>	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U32
35013	Wind velocity <sup>8</sup> (compensated for air pressure) (30013) <sup>1</sup>	m/s	100	Value / 100 (1 decimal place, e.g. 101=1.01m/s)	U32
35015	Reserved				U32
35017	Reserved				U32
35019	Housing interior temperature of the wind transmitter (30403) <sup>1</sup>	°C	10	Value / 10 (1 decimal place, e.g. 355=35.5°C)	S32
35021	Absolute air pressure	hPa	100	Value / 100 (2 decimal places e.g. 105000=1050.00hP a)	U32
35023	Relative air pressure (30803) <sup>1</sup>	hPa	100	Value / 100 (2 decimal places e.g. 105000=1050.00hP a)	U32
35025	Sensor status		1	Value	U32

Regis- ter ad- dress	Parameter name	Unit	Multipli- cator	Explanation	Data type
	(34811) <sup>1</sup>			(no decimal place, bit coded, depend- ing on sensor)	
35027	Main loop run per 1s	1/s	1	Value (no decimal place, e.g. 2550=2550 1/s)	U32
35029	Operating time after reset (34815) <sup>1</sup>	s	1	Value (no decimal place, e.g. 255=255s)	U32
35031	Inclination value $\theta$ Angle between the Z-axis and the vertical (34819) <sup>1</sup>	°	10	Value / 10 (1 decimal place, e.g. 240=24.0°)	S32
35033	Inclination value $\rho$ Angle between the X-axis and the horizontal (34821) <sup>1</sup>	°	10	Value / 10 (1 decimal place, e.g. 240=24.0°)	S32
35035	Inclination value $\phi$ Angle between the Y-axis and the horizontal (34823) <sup>1</sup>	°	10	Value / 10 (1 decimal place, e.g. 240=24.0°)	S32
35037	Frequency vibration measure- ment, X-axis (34825) <sup>1</sup>	Hz	10	Value / 10 (1 decimal place, e.g. 240=24.0Hz)	U32
35039	Acceleration vibration measure- ment, X-axis (34827) <sup>1</sup>	mg	1	Value (no decimal place, e.g. 24=24mg)	U32
35041	Frequency vibration measure- ment, Y-axis (34829) <sup>1</sup>	Hz	10	Value / 10 (1 decimal place, e.g. 240=24.0Hz)	U32
35043	Acceleration vibration measure- ment, Y-axis (34831) <sup>1</sup>	mg	1	Value (no decimal place, e.g. 24=24mg)	U32
35045	Frequency vibration measure- ment, Z-axis (34833) <sup>1</sup>	Hz	10	Value / 10 (1 decimal place, e.g.. 240=24.0Hz)	U32
35047	Acceleration vibration measure- ment, Z-axis (34835) <sup>1</sup>	mg	1	Value (no decimal place, e.g. 24=24mg)	U32
35049	Measured frequency <sup>9</sup>	Hz	10	Value (1 decimal place, e.g. 255=25.5Hz)	U32
35051	Number of revolutions of the cup star		1	Value (no decimal place, e.g. 255=255)	U64
35055	Operating hours	h	1	Value (no decimal place, e.g. 255=255h)	U32
35057	Degree of turbulence	-	100	Value (2 decimal places e.g. 255=2,55)	U32
35059	Temperature of the pressure sen- sor	°C	10	Value / 10 (1 decimal place, e.g. 355=35.5°C)	S32

Regis- ter ad- dress	Parameter name	Unit	Multipli- cator	Explanation	Data type
35100	Time since the last measured value query	ms	1	Value (no decimal place, e.g. 2550=2550ms)	U32
35102	Measured value <sup>2</sup> [0] (most recent) according to UC	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U16
35103	Measured value <sup>2</sup> [1] according to UC	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U16
35104	Measured value <sup>2</sup> [2] according to UC	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U16
35105	Measured value <sup>2</sup> [3] according to UC	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U16
35106	Measured value <sup>2</sup> [4] according to UC	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U16
35107	Measured value <sup>2</sup> [5] according to UC	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U16
35108	Measured value <sup>2</sup> [6] according to UC	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U16
35109	Measured value <sup>2</sup> [7] according to UC	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U16
35110	Measured value <sup>2</sup> [8] according to UC	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U16
35111	Measured value <sup>2</sup> [9] according to UC	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U16
35112	Measured value <sup>2</sup> [10] according to UC	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U16
35113	Measured value <sup>2</sup> [11] according to UC	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U16
35114	Measured value <sup>2</sup> [12] according to UC	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U16
35115	Measured value <sup>2</sup> [13] according to UC	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U16
35116	Measured value <sup>2</sup> [14] according to UC	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U16
35117	Measured value <sup>2</sup> [15] (oldest) according to UC	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U16

Regis- ter ad- dress	Parameter name	Unit	Multipli- cator	Explanation	Data type
<hr/>					
36001	Wind speed Uncorrected <sup>5</sup> (30005) <sup>1</sup>	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U32
36003	Wind speed <sup>3</sup> (30001) <sup>1</sup>	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U32
36005	Wind speed <sup>8</sup> (compensated for air pressure, 30013) <sup>1</sup>	m/s	100	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U32
36007	Sensor status (34811) <sup>1</sup>		1	Value (no decimal place, bit coded, depend- ence on the sensor)	U32
<hr/>					
36101	Wind speed Uncorrected <sup>5</sup> (30005) <sup>1</sup>	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U32
36103	Wind speed <sup>3</sup> (30001) <sup>1</sup>	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U32
36105	Wind speed <sup>8</sup> (compensated for air pressure, 30013 <sup>1</sup> )	m/s	100	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U32
36107	Absolute air pressure (30801) <sup>1</sup>	hPa	100	Value / 100 (2 decimal place, e.g. 105000=1050.00hP a)	U32
36109	Sensor status (34811) <sup>1</sup>		1	Value (no decimal place, bit coded, depend- ence on the sensor)	U32
<hr/>					
36201	Wind speed Uncorrected <sup>5</sup> (30005) 1	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U32
36203	Wind speed <sup>3</sup> (30001)1	m/s	10	Value / 10 (1 decimal place, e.g. 101=10.1m/s)	U32
36205	Wind speed <sup>8</sup> (compensated for air pressure, (300131)	m/s	100	Value / 10 (1 decimal place, e.g. 101=1.01m/s)	U32
36207	Absolute air pressure (30801) 1	hPa	100	Value / 100 (2 decimal place, e.g 105000=1050.00hP a)	U32
36209	Inclination angle $\theta$ Angle be- tween the Z-axis and the vertical (34819) <sup>1</sup>	$^{\circ}$	10	Value / 10 (1 decimal place, e.g. 240=24.0 $^{\circ}$ )	S32

Regis- ter ad- dress	Parameter name	Unit	Multipli- cator	Explanation	Data type
36211	Inclination angle $\rho$ Angle between the X-axis and the horizontal plane (34821) <sup>1</sup>	°	10	Value / 10 (1 decimal place, e.g. 240=24.0°)	S32
36213	Inclination Angle $\Phi$ Angle be- tween the Y-axis and the hori- zontal plane (34823) <sup>1</sup>	°	10	Value / 10 (1 decimal place, e.g. 240=24.0°)	S32
36215	Frequency vibration measure- ment, x-axis (34825) <sup>1</sup>	Hz	100	Value / 100 (2 decimal place, e.g. 2400=24.00Hz)	U32
36217	Acceleration, x-axis (34827) <sup>1</sup>	mg	1	Value (no decimal place, e.g. 24=24mg)	U32
36219	Frequency vibration measure- ment, y-axis (34829) <sup>1</sup>	Hz	100	Value / 100 (2 decimal place, e.g. 2400=24.00Hz)	U32
36221	Acceleration, y-axis (34831) <sup>1</sup>	mg	1	Value (no decimal place, e.g. 24=24mg)	U32
36223	Frequency vibration measure- ment, z-axis (34833) <sup>1</sup>	Hz	100	Value (no decimal place, e.g. 24=24mg)	U32
36225	Acceleration, z-axis (34835) <sup>1</sup>	mg	1	Value (no decimal place, e.g. 24=24mg)	U32
36227	Sensor status (34811) <sup>1</sup>		1	value (no decimal place, bit coded, depend- ence on the sensor)	U32

**Table 5 : MODBUS Input Register**

<sup>1</sup>: The numbers in brackets designate the register addresses which represent the same s. For example,  
the wind velocity is on address 30001 and on address 35001.

<sup>2</sup>: Measuring values of the wind velocity (without compensation) acquired by means of standard characteristic curve.

<sup>3</sup>: The measurement values of the wind speed detected by means of calibration characteristic.

<sup>4</sup>: Average wind speed, based on the selected measured values (see command MS).

<sup>5</sup>: The measured values of the wind speed (without compensation) recorded by means of the standard characteristic curve.

<sup>6</sup>: Standard deviation of the wind speed, based on the selected measured values (see command MS).

<sup>7</sup>: Minimum / maximum wind speed based on the selected measured values (see command MS).

<sup>8</sup>: The air pressure compensated wind speed, based on the measured values recorded by means of the calibration curve.

<sup>9</sup>: Info: It is the directly measured, uncorrected frequency. Independent of the command FO.

**Note:**

***Due to the uninterrupted sequence of the measured val-  
ues from address 35001, the MODBUS Master can read all  
measured values with one request!***

**Note:**

***At start from 36001, the MODBUS master can read out all measured values corresponding to the data telegram 4 with one request!***

**Note:**

***At start from 36101, the MODBUS master can read out all measured values corresponding to the data telegram 5 with one request!***

**Note:**

***At start from 36201, the MODBUS master can read out all measured values, according to the data telegram 6, with one request!***

### 11.3.2 Commands (Holding Register)

All commands of the wind transmitter occupy 32bit, i.e. 2 MODBUS register addresses and represent unsigned integers. The following example shows the change of the baud rate to 19200 baud.

- Set password for the user level (KY=234)

Slave address	Functional code	Start address	Number register	Number byte(s)	Data	CRC	
0x01	0x10	0x9C 49	0x00 02	0x04	0x00 00 00 EA	0x4F 7C	
						CRC low-byte	CRC high-byte

- Set command baud rate to 19200 baud (BR=6)

Slave address	Functional code	Start address	Number register	Number byte(s)	Data	CRC	
0x01	0x10	0x9C 45	0x00 02	0x04	0x00 00 00 06	0x4E A4	
						CRC low-byte	CRC high-byte

The commands available for parameter setting are listed in the chapter 9.2 commands and description.

### 11.3.3 Calibration Tables in the MODBUS-RTU Interpreter

The following table shows the registers available for reading out the calibration table:

Register-address	Parameter Name	Value range	Meaning	File type	Authorization type
41000 ... 41075	standard characteristic	152 Bytes	Read standard characteristic		Read
41076 ... 41151	Newest Calibration table	152 Byte(s)	Read calibration data		Read
41152 ... 41227	2. Newest Calibration table	152 Byte(s)	Read calibration data		Read
41228 ... 41303	3. Newest Calibration table	152 Byte(s)	Read calibration data		Read
41304 ... 41379	4. Newest Calibration table	152 Byte(s)	Read calibration data		Read
41380 ... 41455	5. Newest Calibration table	152 Byte(s)	Read calibration data		Read

Register-address	Parameter Name	Value range	Meaning	File type	Authorization type
41456 ... 41531	6. Newest Calibration table	152 Byte(s)	Read calibration data		Read
41532 ... 41607	7. Newest Calibration table	152 Byte(s)	Read calibration data		Read
41608 ... 41683	8. Newest Calibration table	152 Byte(s)	Read calibration data		Read
41684 ... 41759	9. Newest Calibration table	152 Byte(s)	Read calibration data		Read
41760 ... 41835	Oldest Calibration table	152 Byte(s)	Read calibration data		Read
41836 ... 41855	Timestamp of all tables	40 Byte(s)	Read calibration data		Read

**Table 6: Calibration Tables**

#### 11.3.4 Reading Time Stamp of all Calibration Tables

Reading out the MODBUS register of addresses 41836 to 41855 delivers the time stamps of all calibration tables. Each time stamp comprises 32bit, and is coded as follows:

Byte	bit location	time information
Byte 0 <sup>1</sup>	31	Year
	30	
	29	
	28	
	27	
	26	
Byte 1	25	Month
	24	
	23	
	22	
	21	
	20	
Byte 2	19	Day
	18	
	17	
	16	
	15	
	14	
	13	Hours
	12	
	11	Minutes

Byte	bit location	time information
Byte 3 <sup>2</sup>	10	Seconds
	9	
	8	
	7	
	6	
	5	
	4	
	3	
	2	
	1	
	0	

**Table 7: Reading Time**

<sup>1</sup>: The first transmitted byte.

<sup>2</sup>: The last transmitted byte.

### 11.3.5 Reading Calibration Tables

Reading out the MODBUS register of addresses 41000 to 41835 delivers the calibration tables (41006-41075 standard characteristic line). Each table comprises 152 bytes, and is coded as follows:

Byte	Parameter
Byte 0	Target-Wind-Velocity-Address 1 (Resolution: 0.01m/s) <sup>1</sup>
Byte 1	
Byte 2	Actual-Wind-Velocity-Address 1 (Resolution: 0.01m/s) <sup>1</sup>
Byte 3	
Byte 4	Target-Wind-Velocity-Address 2 (Resolution: 0.01m/s) <sup>1</sup>
Byte 5	
Byte 6	Actual-Wind-Velocity-Address 2 (Resolution: 0.01m/s) <sup>1</sup>
Byte 7	
Byte 8	Target-Wind-Velocity-Address 3 (Resolution: 0.01m/s) <sup>1</sup>
Byte 9	
Byte 10	Actual-Wind-Velocity-Address 3 (Resolution: 0.01m/s) <sup>1</sup>
Byte 11	
Byte 12	Target-Wind-Velocity-Address 4 (Resolution: 0.01m/s) <sup>1</sup>
Byte 13	
Byte 14	Actual-Wind-Velocity-Address 4 (Resolution: 0.01m/s) <sup>1</sup>
Byte 15	
Byte 16	Target-Wind-Velocity-Address 5 (Resolution: 0.01m/s) <sup>1</sup>
Byte 17	
Byte 18	Actual-Wind-Velocity-Address 5 (Resolution: 0.01m/s) <sup>1</sup>
Byte 19	
Byte 20	Target-Wind-Velocity-Address 6 (Resolution: 0.01m/s) <sup>1</sup>
Byte 21	
Byte 22	Actual-Wind-Velocity-Address 6 (Resolution: 0.01m/s) <sup>1</sup>
Byte 23	
Byte 24	Target-Wind-Velocity-Address 7 (Resolution: 0.01m/s) <sup>1</sup>
Byte 25	

<b>Byte</b>	<b>Parameter</b>
Byte 26	Actual-Wind-Velocity-Address 7 (Resolution: 0.01m/s) <sup>1</sup>
Byte 27	
Byte 28	Target-Wind-Velocity-Address 8 (Resolution: 0.01m/s) <sup>1</sup>
Byte 29	
Byte 30	Actual-Wind-Velocity-Address 8 (Resolution: 0.01m/s) <sup>1</sup>
Byte 31	
Byte 32	Target-Wind-Velocity-Address 9 (Resolution: 0.01m/s) <sup>1</sup>
Byte 33	
Byte 34	Actual-Wind-Velocity-Address 9 (Resolution: 0.01m/s) <sup>1</sup>
Byte 35	
Byte 36	Target-Wind-Velocity-Address 10 (Resolution: 0.01m/s) <sup>1</sup>
Byte 37	
Byte 38	Actual-Wind-Velocity-Address 10 (Resolution: 0.01m/s) <sup>1</sup>
Byte 39	
Byte 40	Target-Wind-Velocity-Address 11 (Resolution: 0.01m/s) <sup>1</sup>
Byte 41	
Byte 42	Actual-Wind-Velocity-Address 11 (Resolution: 0.01m/s) <sup>1</sup>
Byte 43	
Byte 44	Target-Wind-Velocity-Address 12 (Resolution: 0.01m/s) <sup>1</sup>
Byte 45	
Byte 46	Actual-Wind-Velocity-Address 12 (Resolution: 0.01m/s) <sup>1</sup>
Byte 47	
Byte 48	Target-Wind-Velocity-Address 13 (Resolution: 0.01m/s) <sup>1</sup>
Byte 49	
Byte 50	Actual-Wind-Velocity-Address 13 (Resolution: 0.01m/s) <sup>1</sup>
Byte 51	
Byte 52	Target-Wind-Velocity-Address 14 (Resolution: 0.01m/s) <sup>1</sup>
Byte 53	
Byte 54	Actual-Wind-Velocity-Address 14 (Resolution: 0.01m/s) <sup>1</sup>
Byte 55	
Byte 56	Target-Wind-Velocity-Address 15 (Resolution: 0.01m/s) <sup>1</sup>
Byte 57	
Byte 58	Actual-Wind-Velocity-Address 15 (Resolution: 0.01m/s) <sup>1</sup>
Byte 59	
Byte 60	Target-Wind-Velocity-Address 16 (Resolution: 0.01m/s) <sup>1</sup>
Byte 61	
Byte 62	Actual-Wind-Velocity-Address 16 (Resolution: 0.01m/s) <sup>1</sup>
Byte 63	
Byte 64	Target-Wind-Velocity-Address 17 (Resolution: 0.01m/s) <sup>1</sup>
Byte 65	
Byte 66	Actual-Wind-Velocity-Address 17 (Resolution: 0.01m/s) <sup>1</sup>
Byte 67	
Byte 68	Target-Wind-Velocity-Address 18 (Resolution: 0.01m/s) <sup>1</sup>
Byte 69	
Byte 70	Actual-Wind-Velocity-Address 18 (Resolution: 0.01m/s) <sup>1</sup>
Byte 71	

<b>Byte</b>	<b>Parameter</b>
Byte 72	Target-Wind-Velocity-Address 19 (Resolution: 0.01m/s) <sup>1</sup>
Byte 73	
Byte 74	Actual-Wind-Velocity-Address 19 (Resolution: 0.01m/s) <sup>1</sup>
Byte 75	
Byte 76	Target-Wind-Velocity-Address 20 (Resolution: 0.01m/s) <sup>1</sup>
Byte 77	
Byte 78	Actual-Wind-Velocity-Address 20 (Resolution: 0.01m/s) <sup>1</sup>
Byte 79	
Byte 80	Target-Wind-Velocity-Address 21 (Resolution: 0.01m/s) <sup>1</sup>
Byte 81	
Byte 82	Actual-Wind-Velocity-Address 21 (Resolution: 0.01m/s) <sup>1</sup>
Byte 83	
Byte 84	Target-Wind-Velocity-Address 22 (Resolution: 0.01m/s) <sup>1</sup>
Byte 85	
Byte 86	Actual-Wind-Velocity-Address 22 (Resolution: 0.01m/s) <sup>1</sup>
Byte 87	
Byte 88	Target-Wind-Velocity-Address 23 (Resolution: 0.01m/s) <sup>1</sup>
Byte 89	
Byte 90	Actual-Wind-Velocity-Address 23 (Resolution: 0.01m/s) <sup>1</sup>
Byte 91	
Byte 92	Target-Wind-Velocity-Address 24 (Resolution: 0.01m/s) <sup>1</sup>
Byte 93	
Byte 94	Actual-Wind-Velocity-Address 24 (Resolution: 0.01m/s) <sup>1</sup>
Byte 95	
Byte 96	Target-Wind-Velocity-Address 25 (Resolution: 0.01m/s) <sup>1</sup>
Byte 97	
Byte 98	Actual-Wind-Velocity-Address 25 (Resolution: 0.01m/s) <sup>1</sup>
Byte 99	
Byte 100	Target-Wind-Velocity-Address 26 (Resolution: 0.01m/s) <sup>1</sup>
Byte 101	
Byte 102	Actual-Wind-Velocity-Address 26 (Resolution: 0.01m/s) <sup>1</sup>
Byte 103	
Byte 104	Target-Wind-Velocity-Address 27 (Resolution: 0.01m/s) <sup>1</sup>
Byte 105	
Byte 106	Actual-Wind-Velocity-Address 27 (Resolution: 0.01m/s) <sup>1</sup>
Byte 107	
Byte 108	Target-Wind-Velocity-Address 28 (Resolution: 0.01m/s) <sup>1</sup>
Byte 109	
Byte 110	Actual-Wind-Velocity-Address 28 (Resolution: 0.01m/s) <sup>1</sup>
Byte 111	
Byte 112	Target-Wind-Velocity-Address 29 (Resolution: 0.01m/s) <sup>1</sup>
Byte 113	
Byte 114	Actual-Wind-Velocity-Address 29 (Resolution: 0.01m/s) <sup>1</sup>
Byte 115	
Byte 116	Target-Wind-Velocity-Address 30 (Resolution: 0.01m/s) <sup>1</sup>
Byte 117	

Byte	Parameter
Byte 118	Actual-Wind-Velocity-Address 30 (Resolution: 0.01m/s) <sup>1</sup>
Byte 119	
Byte 120	Target-Wind-Velocity-Address 31 (Resolution: 0.01m/s) <sup>1</sup>
Byte 121	
Byte 122	Actual-Wind-Velocity-Address 31 (Resolution: 0.01m/s) <sup>1</sup>
Byte 123	
Byte 124	Target-Wind-Velocity-Address 32 (Resolution: 0.01m/s) <sup>1</sup>
Byte 125	
Byte 126	Actual-Wind-Velocity-Address 32 (Resolution: 0.01m/s) <sup>1</sup>
Byte 127	
Byte 128	Calibration certificate number <sup>2</sup>
Byte 129	
Byte 130	
Byte 131	
Byte 132	Custom string <sup>3</sup>
Byte 133	
Byte 134	
Byte 135	
Byte 136	
Byte 137	
Byte 138	
Byte 139	
Byte 140	
Byte 141	
Byte 142	
Byte 143	
Byte 144	
Byte 145	
Byte 146	
Byte 147	
Byte 148	Date / Time <sup>4</sup>
Byte 149	
Byte 150	
Byte 151	

**Table 8: Reading Calibration**

<sup>1</sup> : Wind velocity as unsigned 16Bit value with 2 decimal places (for ex.. 1234 = 12,34m/s).

<sup>2</sup> : Number as unsigned 32Bit value.

<sup>3</sup> : 16 characters comprising String.

<sup>4</sup> : Time stamp (format see chapter 4.4.1).

### 11.3.6 Device identification (Read Device Identification)

The wind transmitter supports the MODBUS function 0x2B (Read Device Identification) with the MEI type 0x0E. This enables the MODBUS Master to recognize the wind transmitter.

Function: 0x2B / 0x0E (Read Device Identification)

MEI type: 0x0E

Read Device ID code: 1, 2, 3 (stream access)

Supported objects:

Object Id	Object name / de- scription	Type	Category	Value <sup>1, 2</sup>
0x00	VendorName	ASCII string	Basic	“Adolf Thies GmbH &CO. KG”
0x01	ProductCode	ASCII string		“4.3352.00.400”
0x02	FirmwareVersion	ASCII string		“V04.xx”
0x03	VendorUrl	ASCII string	Regular	“www.thiesclima.com”
0x04	ProductName	ASCII string		“WIND VELOCITY TRANSMITTER”
0x05	ModelName	ASCII string		“WIND TRANSMITTER FIRST CLASS ADVANCED X”
0x80	HW-ID	ASCII string	Extended	“304A37393634110B000700” <sup>3</sup>

**Table 9: Device Identification**

<sup>1</sup>: The maximum length of a value is 32 bytes.

<sup>2</sup>: The quotation marks are not part of the character string.

<sup>3</sup>: The HW-ID (object id: 0x80) consists of 22 bytes which represent 11 binary bytes.

## 12 Appendix 1 Data Telegrams

---

### 12.1 Telegram 1

The wind transmitter responds with the measured value telegram to the command "00TR1\r".  
The table below shows the telegram structure:

Position	Length	Example	Description
1	1	STX	Start character (start of text)
2	2	xx	Identification number (ID) xx: 0...99
4	1	;	Separation character (';')
5	4	xx.x	Instantaneous value of the wind velocity, calculated with the current calibration table; unit: m/s; resolution: 0.1m/s; MODBUS-Register: 30001. When there is no calibration table existing the calculated measuring value of the standard characteristic curve is output.
9	1	;	Separation character (';')
10	4	xx.x	Instantaneous value of the wind velocity, calculated with the standard curve; unit: m/s; resolution: 0.1m/s MODBUS-Register: 30005.
14	1	;	Separation character (';')
15	6	xxxx.x	Measured frequency; unit: Hz; resolution 0.1Hz MODBUS-Register: 35049.
21	1	;	Separation character (';')
22	4	xx.x	Current gust of the wind velocity of the last 1min., calculated with the current calibration table; unit: m/s; resolution: 0.1m/s; MODBUS-Register: 30011.
26	1	;	Separation character (';')
27	4	xx.x	Current minimum value of the wind velocity of the last 1min., calculated with the current calibration table; unit: m/s; resolution: 0.1m/s; MODBUS-Register: 30009.
31	1	;	Separation character (';')
32	4	xx.x	Current average value of the wind velocity, calculated according command MS; unit: m/s; resolution: 0.1m/s; period: Averaging interval (→ Command MI) ; MODBUS-Register: 30003.
36	1	;	Separation character (';')
37	4	xx.x	Current standard deviation of the wind velocity, calculated with the current calibration table; unit: m/s; resolution: 0.1m/s; period: Averaging (→Command MI); MODBUS-Register: 30007.
41	1	;	Separation character (';')
42	5	xx.xx	Current degree of turbulence of wind speed, calculated according to command MS; unit: without dimension; resolution: 0.01; MODBUS-Register: 35057.
47	1	;	Separation character (';')
48	5	yxx.x	Housing interior temperature of the wind transmitter (unit: °C); MODBUS-Register: 30403 y: Sign (+ or -) xx.x: Temperature value; resolution: 0.1°C
53	1	;	Separation character (';')
54	5	yxx.x	Temperature of pressure and acceleration sensor (unit: °C)

Position	Length	Example	Description
			y: Sign (+ or -) xx.x: Temperature value; resolution: 0.1°C; MODBUS-Register: 35059
59	1	;	Separation character (';')
60	6	xxxx.x	Absolute air pressure (unit: hPa) xxxx.x: Pressure value; resolution: 0.1hPa; MODBUS-Register: 30801
66	1	;	Separation character (';')
67	6	xxxx.x	Relative air pressure (unit: hPa) xxxx.x: Pressure value; resolution: 0.1hPa; MODBUS-Register: 30803
73	1	;	Separation character (';')
74	6	yxxxx.x	Inclination value $\theta$ Angle between the Z-axis and the vertical, unit: ° y: Sign (+ or -) xxx.x: Angle; resolution: 0.1; MODBUS-Register: 34819
80	1	;	Separation character (';')
81	6	yxxxx.x	Inclination value $\rho$ Angle between the X-axis and the horizontal, unit: ° y: Sign (+ or -) xxx.x: Angle; resolution: 0.1°; MODBUS-Register: 34821
87	1	;	Separation character (';')
88	6	yxxxx.x	Inclination value $\Phi$ Angle between the Y-axis and the horizontal, unit: ° y: Sign (+ or -) xxx.x: Angle; resolution: 0.1°; MODBUS-Register: 34823
94	1	;	Separation character (';')
95	5	xxx.x	Frequency vibration measurement, X-axis (unit: Hz) xxx.x: Frequency; resolution: 0.1Hz; MODBUS-Register: 34825
100	1	;	Separation character (';')
101	4	xxxx	Acceleration vibration measurement, X-axis xxxx: Amplitude; resolution: 1mg; MODBUS-Register: 34827
105	1	;	Separation character (';')
106	5	xxx.x	Frequency vibration measurement, Y-axis (unit: Hz) xxx.x: Frequency; resolution: 0.1Hz; MODBUS-Register: 34829
111	1	;	Separation character (';')
112	4	xxxx	Acceleration vibration measurement, Y-axis xxxx: Amplitude; resolution: 1mg; MODBUS-Register: 34831
116	1	;	Separation character (';')
117	5	xxx.x	Frequency vibration measurement, Z-axis (unit: Hz) xxx.x: Frequency; resolution: 0.1Hz; MODBUS-Register: 34833
122	1	;	Separation character (';')
123	4	xxxx	Acceleration vibration measurement, Z-axis xxxx: acceleration; resolution: 1mg; MODBUS-Register: 34835
127	1	;	Separation character (';')
128	8	abcdefgh	32-bit sensor status in hexadecimal representation a: high nibble in high byte in HEX (Bit 31 ... 28) b: low nibble in high byte in HEX (Bit 27 ... 24) c: high nibble in byte 2 in HEX (Bit 23 ... 20) d: low nibble in byte 2 in HEX (Bit 19 ... 16) e: high nibble in byte 3 in HEX (Bit 15 ... 12) f: low nibble in byte 3 in HEX (Bit 11 ... 8)

Position	Length	Example	Description
			g: high nibble in low byte in HEX (Bit 7 ... 4) h: low nibble in low byte in HEX (Bit 3 ... 0) MODBUS-Register: 34811
136	1	*	Separation character ('*')
137	2	xy	Exclusive or linked check sum in hexadecimal representation x: high nibble check sum in HEX y: low nibble check sum in HEX
139	1	ETX	End character (end of text)
140	1	CR	Carriage Return
141	1	LF	Line feed

**Table 10: Measured Value Telegram**

Pressure and acceleration sensors are thermally coupled.

### Measured values

If the wind velocity exceeds the measured range specified by the calibration table, the standard curve will be used for the further calculation and the corresponding bit is set in the status word.

## 12.2 Telegram 2

The wind transmitter responds with the measured value telegram 2 to the command "00TR2\r". The table below shows the telegram structure:

Position	Length	Example	Description
1	1	STX	Start character (start of text).
2	2	xx	Identification number (ID) xx: 0..99
4	1	;	Separation character (';')
5	5	xx.xx	Instantaneous value of the wind velocity, calculated with the current calibration table; unit: m/s; resolution: 0.01m/s.
10	1	;	Separation character (';')
11	5	xx.xx	Instantaneous value of the wind velocity, calculated with the standard curve; unit: m/s; resolution: 0.01m/s.
16	1	;	Separation character (';')
17	5	xx.xx	Instantaneous value of the wind velocity, corrected depending on the air pressure (wind velocity calculated with the current calibration table <sup>1</sup> ) unit: m/s; resolution: 0.01m/s.
22	1	;	Separation character (';')
23	5	xx.xx	Reserved
28	1	;	Separation character (';')
29	5	xxx.x	Reserved
34	1	;	Separation character (';')
35	5	yxx.x	Housing interior temperature of the wind transmitter (unit: °C) y: Sign (+ or -) xx.x: Temperature value; resolution: 0.1°C
40	1	;	Separation character (';')
41	5	xxxx.x	Temperature of pressure- and acceleration sensor (unit: °C) y: Sign (+ or -) xx.x: Temperature value; resolution: 0.1°C
46	1	;	Separation character (';')
47	6	xxxx.x	Absolute air pressure (unit: hPa) xxxx.x: Pressure value; resolution: 0.1hPa
53	1	;	Separation character (';')
54	6	xxxx.x	Absolute air pressure, corrected depending on the wind velocity (unit: hPa) xxxx.x: Pressure value; resolution: 0.1hPa
60	1	;	Separation character (';')
61	6	xxxx.x	Relative air pressure (unit: hPa) xxxx.x: Pressure value; resolution: 0.1hPa
67	1	;	Separation character (';')
68	8	abcdefgh	32Bit Sensor status in hexadecimal representation a: high nibble in high byte in HEX (Bit 31 ... 28) b: low nibble in high byte in HEX (Bit 27 ... 24) c: high nibble in byte 2 in HEX (Bit 23 ... 20) d: low nibble in byte 2 in HEX (Bit 19 ... 16) e: high nibble in byte 3 in HEX (Bit 15 ... 12)

Position	Length	Example	Description
			f: low nibble in byte 3 in HEX (Bit 11 ... 8) g: high nibble in low byte in HEX (Bit 7 ... 4) h: low nibble in low byte in HEX (Bit 3 ... 0)
76	1	*	Separation character (';')
77	2	xy	Exclusive or linked check sum in hexadecimal representation x: high nibble check sum in HEX y: low nibble check sum in HEX
79	1	ETX	End character (end of text)
80	1	CR	Carriage Return
81	1	LF	Line feed

**Table 11 : Measured Value Telegram 2**

Pressure and acceleration sensors are thermally coupled.

<sup>1)</sup>: If there is no calibration table or the "UC" parameter is 0, the calculated measured value of the standard characteristic is used here.

## 12.3 Telegram 4

The wind sensor responds to the command "00TR4 \ r" with the measured value telegram. The telegram structure is shown in the following table:

Position	Length	Sample	Description
1	1	STX	Start of text
2	2	xx	Identification number (ID) xx: 0..99
4	1	;	Separation marks (';')
5	5	xx.xx	Instantaneous value of the wind speed, calculated with the standard curve; Unit: m / s; Resolution: 0.01m / s.
10	1	;	Separation marks (';')
11	5	xx.xx	Instantaneous value of the wind speed, calculated with the current calibration table; Unit: m / s; Resolution: 0.01m / s. If no calibration table is available, the calculated measured value of the standard characteristic is output here.
16	1	;	Separation marks (';')
17	5	xx.xx	Instantaneous value of wind speed corrected as a function of air pressure (wind speed calculated with the current calibration table) Unit: m / s; Resolution: 0.01m / s.
22	1	;	Separation marks (';')
23	8	abcdefg h	32Bit Sensor status in hexadecimal representation a: high nibble im high byte in HEX (Bit 31 ... 28) b: low nibble im high byte in HEX (Bit 27 ... 24) c: high nibble im byte 2 in HEX (Bit 23 ... 20) d: low nibble im byte 2 in HEX (Bit 19 ... 16) e: high nibble im byte 3 in HEX (Bit 15 ... 12) f: low nibble im byte 3 in HEX (Bit 11 ... 8) g: high nibble im low byte in HEX (Bit 7 ... 4) h: low nibble im low byte in HEX (Bit 3 ... 0)
31	1	*	Separation marks ('*)
32	2	xy	Exclusive or linked checksum in hexadecimal representation x: high nibble checksum in HEX y: low nibble checksum in HEX

Position	Length	Sample	Description
34	1	ETX	End character (end of text)
35	1	CR	Carriage return (Carriage Return)
36	1	LF	Line feed

**Table 12: Value-Telegram 4**

Pressure and acceleration sensors are thermally coupled.

## 12.4 Telegram 5

The wind sensor responds to the command "00TR5 \ r" with the measured value telegram. The telegram structure is shown in the following table:

Position	Length	Sample	Description
1	1	STX	Start of text
2	2	xx	Identification number (ID) xx: 0...99
4	1	;	Separation marks (';')
5	5	xx.xx	Instantaneous value of the wind speed calculated with the standard characteristic curve; Unit: m / s; Resolution: 0.01m / s.
10	1	;	Separation marks (';')
11	5	xx.xx	Instantaneous value of the wind speed calculated with the current calibration table; Unit: m / s; Resolution: 0.01m / s. If no calibration table is available, the calculated measured value of the standard characteristic is output here.
16	1	;	Separation marks (';')
17	5	xx.xx	Instantaneous value of wind speed corrected as a function of air pressure (wind speed calculated with the current calibration table) Unit: m / s; Resolution: 0.01m / s.
22	1	;	Separation marks (';')
23	6	xxxx.x	Absolute air pressure (unit: hPa) xxxx.x: pressure value; Resolution: 0.1hPa
29	1	;	Separation marks (';')
30	8	abcdefgh	32Bit Sensor status in hexadecimal representation a: high nibble im high byte in HEX (Bit 31 ... 28) b: low nibble im high byte in HEX (Bit 27 ... 24) c: high nibble im byte 2 in HEX (Bit 23 ... 20) d: low nibble im byte 2 in HEX (Bit 19 ... 16) e: high nibble im byte 3 in HEX (Bit 15 ... 12) f: low nibble im byte 3 in HEX (Bit 11 ... 8) g: high nibble im low byte in HEX (Bit 7 ... 4) h: low nibble im low byte in HEX (Bit 3 ... 0)
38	1	*	Separation marks ('**')
39	2	xy	Exclusive or linked checksum in hexadecimal notation x: high nibble checksum in HEX y: low nibble checksum in HEX
41	1	ETX	End of text
42	1	CR	Carriage Return
43	1	LF	Line feed

**Table 13: Measured value telegram 5**

Pressure and acceleration sensors are thermally coupled.

## 12.5 Telegram 6

The wind sensor responds to the command "00TR6 \ r" with the measured value telegram. The telegram structure is shown in the following table:

Position	Length	Sample	Description
1	1	STX	Start of text
2	2	xx	Identification number (ID) xx: 0...99
4	1	;	Separation marks (';')
5	5	xx.xx	Instantaneous value of the wind speed calculated with the standard characteristic curve; Unit: m / s; Resolution: 0,01m/s.
10	1	;	Separation marks (';')
11	5	xx.xx	Instantaneous value of the wind speed calculated with the current calibration table; Unit: m / s; Resolution: 0.01m / s. If no calibration table is available, the calculated measured value of the standard characteristic is output here.
16	1	;	Separation marks (';')
17	5	xx.xx	Instantaneous value of wind speed corrected as a function of air pressure (wind speed calculated with the current calibration table) Unit: m / s; Resolution: 0.01m / s.
22	1	;	Separation marks (';')
23	6	xxxx.x	Absolute air pressure (unit: hPa) xxxx.x: pressure value; Resolution: 0.1hPa
29	1	;	Separation marks (';')
30	6	yxxx.x	Tilt angle $\theta$ Angle between the Z-axis and the vertical, unit: ° y: sign (+ or -) xxx.x: angle; Resolution: 0,1°
36	1	;	Separation marks (';')
37	6	yxxx.x	Tilt angle $\theta$ Angle between the X-axis and the horizontal, unit: ° y: sign (+ or -) xxx.x: angle; Resolution: 0.1 °
43	1	;	Separation marks (';')
44	6	yxxx.x	Tilt angle $\Phi$ Angle between the Y-axis and the horizontal, unit: ° y: sign (+ or -) xxx.x: angle; Resolution: 0.1 °
50	1	;	Separation marks (';')
51	5	xxx.x	Frequency vibration measurement, x-axis (unit: Hz) xxx.x: frequency; Resolution: 0.1Hz
56	1	;	Separation marks (';')
57	4	xxxx	Acceleration vibration measurement, x-axis (unit: mg) xxxx: acceleration; Resolution: 1mg
61	1	;	Separation marks (';')
62	5	xxx.x	Frequency vibration measurement, y-axis (unit: Hz) xxx.x: frequency; Resolution: 0.1Hz
67	1	;	Separation marks (';')
68	4	xxxx	Acceleration vibration measurement, y-axis (unit: mg) xxxx: acceleration; Resolution: 1mg
72	1	;	Separation marks (';')

Position	Length	Sample	Description
73	5	xxx.x	Frequency vibration measurement, z-axis (unit: Hz) xxx.x: frequency; Resolution: 0.1Hz
78	1	:	Separation marks (';')
79	4	xxxx	Acceleration vibration measurement, z-axis (unit: mg) xxxx: acceleration; Resolution: 1mg
83	1	:	Separation marks (';')
84	8	abcdefgh	32Bit Sensor status hexadecimal representation a: high nibble im high byte in HEX (Bit 31 ... 28) b: low nibble im high byte in HEX (Bit 27 ... 24) c: high nibble im byte 2 in HEX (Bit 23 ... 20) d: low nibble im byte 2 in HEX (Bit 19 ... 16) e: high nibble im byte 3 in HEX (Bit 15 ... 12) f: low nibble im byte 3 in HEX (Bit 11 ... 8) g: high nibble im low byte in HEX (Bit 7 ... 4) h: low nibble im low byte in HEX (Bit 3 ... 0)
92	1	*	Separation marks ('**')
93	2	xy	Exclusive or linked checksum in hexadecimal notation x: high nibble check sum in HEX y: low nibble check sum in HEX
95	1	ETX	End of text
96	1	CR	Carriage Return
97	1	LF	Line feed

**Table 14: Value-Telegram 6**

Pressure and acceleration sensors are thermally coupled.

## 12.6 Measured Value Memory Telegram

The measuring values of the wind velocity (without compensation) acquired by means of standard characteristic curve) are buffered in a ring memory comprising 16 values. The time distance between the measured values is defined by parameter SR. The wind transmitter responds with the measured value memory telegram to the command “00TR30\r”. The table below shows the telegram structure:

Position	Length	Example	Description
1	1	STX	Start character (start of text)
2	5	xxxxx	Time since the last query in (unit: ms)
7	1	:	Separation character (';')
8	5	xxx.x	Most recent measured value (0); unit: m/s; resolution: 0.1m/s
13	1	:	Separation character (';')
14	5	xxx.x	Measured value (1); unit: m/s; resolution: 0.1m/s
19	1	:	Separation character (';')
20	5	xxx.x	Measured value (2); unit: m/s; resolution: 0.1m/s
25	1	:	Separation character (';')
26	5	xxx.x	Measured value (3); unit: m/s; resolution: 0.1m/s
31	1	:	Separation character (';')
32	5	xxx.x	Measured value (4); unit: m/s; resolution: 0.1m/s
37	1	:	Separation character (';')
38	5	xxx.x	Measured value (5); unit: m/s; resolution: 0.1m/s
43	1	:	Separation character (';')

Position	Length	Example	Description
44	5	xxx.x	Measured value (6); unit: m/s; resolution: 0.1m/s
49	1	;	Separation character (';')
50	5	xxx.x	Measured value (7); unit: m/s; resolution: 0.1m/s
55	1	;	Separation character (';')
56	5	xxx.x	Measured value (8); unit: m/s; resolution: 0.1m/s
61	1	;	Separation character (';')
62	5	xxx.x	Measured value (9); unit: m/s; resolution: 0.1m/s
67	1	;	Separation character (';')
68	5	xxx.x	Measured value (10); unit: m/s; resolution: 0.1m/s
73	1	;	Separation character (';')
74	5	xxx.x	Measured value (11); unit: m/s; resolution: 0.1m/s
79	1	;	Separation character (';')
80	5	xxx.x	Measured value (12); unit: m/s; resolution: 0.1m/s
85	1	;	Separation character (';')
86	5	xxx.x	Measured value (13); unit: m/s; resolution: 0.1m/s
91	1	;	Separation character (';')
92	5	xxx.x	Measured value (14); unit: m/s; resolution: 0.1m/s
97	1	;	Separation character (';')
98	5	xxx.x	Measured value (15); unit: m/s; resolution: 0.1m/s
103	1	;	Separation character (';')
104	1	*	Separation character ('*)
105	2	xy	Exclusive or linked check sum in hexadecimal representation x: high nibble check sum in HEX y: low nibble check sum in HEX
107	1	ETX	End character (end of text)
108	1	CR	Carriage Return
109	1	LF	Line feed

**Table 15 : Measured Value Memory Telegram**

In the order interpreter “MODBUS RTU”, the ring buffer is readable via one of the following addresses:

Register address	Description
35100	Time since the last measured value query in ms
35102	Most recent measured value (0)
35103	Measured value (1)
35104	Measured value (2)
35105	Measured value (3)
35106	Measured value (4)
35107	Measured value (5)
35108	Measured value (6)
35109	Measured value (7)
35110	Measured value (8)
35111	Measured value (9)
35112	Measured value (10)
35113	Measured value (11)
35114	Measured value (12)
35115	Measured value (13)
35116	Measured value (14)
35117	Oldest measured value (15)

After reading the ring buffer, independent from the number of the read measured values, all 16 memory cells are set to 0xffff.

Deleted measured values or not yet recorded measured values are initialized with 0xffff.

**Note:**

*With each reading of the ring buffer, it will be cleared.*

## 13 Technical Data

Characteristics	Description
Measurement range	0.3 ... 75m/s
Measurement uncertainty	±1% from the measured value or < ±0,2m/s @ 0,3 ... 50m/s
Survival velocity	80m/s (min. 30 minutes)
Admissible environmental conditions	-40 ... +80°C 0 ... 100% relative humidity, including condensation
Housing inside temperature measurement	Measurement range: -40 ... +80°C Precision: ±1°C
Air pressure measurement	Measurement range: 300 ... 1100hPa Precision: ±1.0hPa @ 20°C
Inclination measurement (X, Y, Z)	Measurement range: -89.9 ... +89.9° Precision: +/-1°
Vibration (X, Y, Z)	Measurement range: 0 ... 50Hz Precision: ±0.4Hz
Acceleration	Measurement range: ±8g (1g=9,81m/s <sup>2</sup> ) Precision: ±30mg @ -3g ... +3g
Temperature control for air pressure sensor, acceleration sensor.	Precision: ±0.5K Setting range: 0 ... +60°C The target temperature is set with a command with a resolution of 0.1K
Frequency output	Type open-drain or push-pull Form rectangle Frequency 1082Hz @ 50m/s without using calibration data Amplitude corresponds to supply voltage, max. 15V Load Ra > 1 kΩ (Push-pull output with 200Ω in series) Approx. <200nF (corresponds to a cable length ~ 1km)
Serial interface	Type RS485 Operating mode Half duplex mode Data format 8N1 Baud rate 2400, 4800, 9600, 19200, 38400, 57600 Response time max. 10ms (parameter „RD“ equal 0)
Linearity	Correlation factor r between frequency and wind velocity $y = 0,0462 * f + 0,21$ typical with standard curve $r > 0,999\ 99$ (4 ... 20m/s)
Start-up velocity	<0.3m/s
Resolution	0.05m wind run
Distance constant	<3m (according to ASTM D 5096 – 96), 3 m according to ISO 17713-1
Turbulent flow into cups	Deviation Δv turbulent compared to stationary horizontal flow -0.5% < Δv <+2% Frequency < 2Hz
Classification	According to IEC 61400-12-1 edition 2.0 Wind Turbine Power Performance Testing 2017-03
Wind load	Approx. 100 N @ 75m/s
Heater	Surface temperature of the housing neck >0°C at 20m/s to -10°C air temperature, at 1 0m/s to -20°C

Characteristics	Description
	Use of the Thies icing standard 012002 on the housing neck Heater controlled with temperature sensor.
Electric supply for electronic	Voltage: 3.7 ... 42V DC (galvanically separated from the housing) Current: 8mA typ. 100mA max. (with heating pressure sensor on) approx. 0.9mA in power saving mode SM1, HT0 approx. 1.5mA in power saving mode SM2, HT0, HP65535
Electric supply for Housing heater	Current: 24V AC/DC +/- 20%, 45...65 Hz (galvanic isolation from housing) Idling voltage: max. 32V AC and max. 48V DC Power: 25W  Proportional control, control temperature: 5°C, Heater can be enabled disabled via interface, galvanically separated to the housing and the measured value logging
Type of connection	8-pin connector for shielded conductor in shaft (see connection diagram)
Mounting	Mounting on mast Outer diameter ≤ 34mm Inner diameter ≥ 22mm Note: mounting on mast is possible with separate adapter (option).
Dimensions	see dimensional drawing
Weight	approx. 0.5kg
Type of protection	IP 55 (DIN 40050)
Material	Housing Mast-adaptor
	Aluminum (AlMgSi1) Stainless steel V4A (1.4571)

## 14 FAQ - Frequently Asked Questions


---

For this product we have provided a FAQ - Frequently Asked Questions collection for our customers on the homepage.

Link: [https://www.thiesclima.com/db/dnl/4.3352.x0.40x\\_FAQ\\_en.pdf](https://www.thiesclima.com/db/dnl/4.3352.x0.40x_FAQ_en.pdf)

## 15 Dimensional Drawing

---

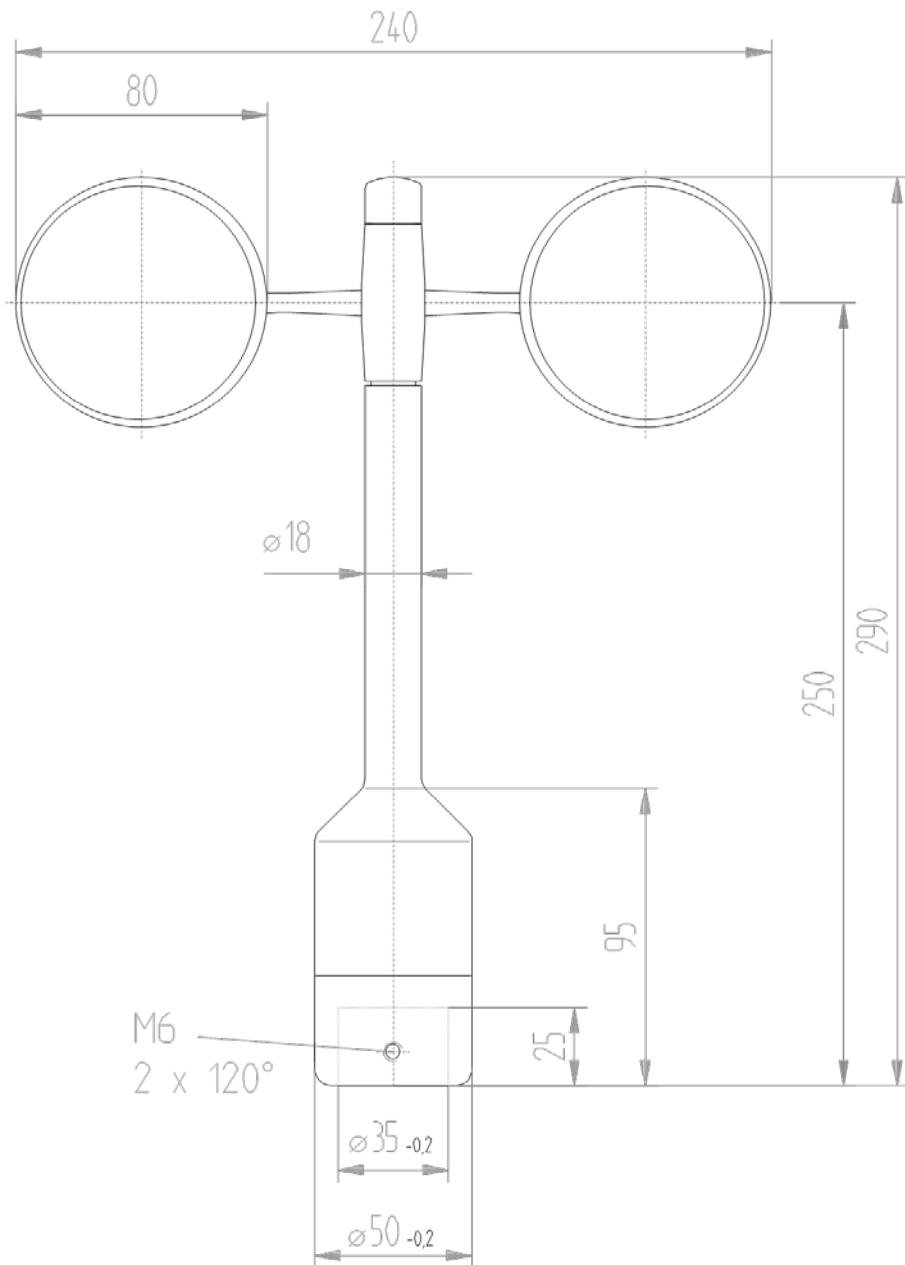

## 16 Accessories (optional)

Traverse 0.6m For mounting the wind velocity and wind direction transmitter jointly onto a mast.	4.3174.00.000	Horizontal sensor distance: 0.6m Vertical sensor distance: 0.2m Mast receptacle: 48 ... 50mm Material: Aluminum, anodized Dimensions: tube Ø 34x4mm, 668mm long, 756mm high
Hanger –FIRST CLASS- 1m For the lateral mounting of a wind velocity and wind direction transmitter onto a mast tube.	4.3184.01.000	Sensor distance to mast: 1m Mast clamp: 40 ... 80mm Tube diameter: 34mm Material: Aluminium
Lightning rod For mounting the a/m traverse or hanger.	4.3100.98.000	Dimension: Ø 12mm, 500mm long, 1050mm high Material: Aluminum
Adaptor For isolated mounting of each wind transmitter and wind direction transmitter on the traverse (4.3174.0.000).	509077	Dimension: A:Ø 34mm, outside 25mm high B:Ø 35mm, inside 45mm high Material: POM
Calibration without adjustment:	E433524X0 2.3	<b>Frequency output at pin 1:</b> parameter setting FO4 and UC0
Calibration without adjustment:	E433524X2 2.3	<b>Output at telegram 2 pos. 17</b> parameter setting FO4 and UC0
Calibration with adjustment and re-calibration	E433524X1 2.3	<b>Frequency output at pin 1:</b> parameter setting FO4 and UC1
Calibration with adjustment and re-calibration	E433524X3 2.3	<b>Output at telegram 2 pos. 17</b> parameter setting FO4 and UC1

Please contact us for other accessories such as cables, power supply units, masts, as well as for additional mast- or system-constructions.

Example: Wind transmitter with traverse 4.3174.00.000 and lightning rod 4.3100.98.000



# 17 EC-Declaration of Conformity

---

**Manufacturer:** Adolf Thies GmbH & Co. KG  
 Hauptstraße 76  
 37083 Göttingen, Germany  
<http://www.thiesclima.com>

**Product:** Windsensor First Class Advaced II and X

Doc. Nr. 1575-45530\_CE

**Article Overview:**

4.3352.00.000	4.3352.10.000	4.3352.00.400	4.3352.10.400	4.3352.00.401	4.3352.10.401	4.3352.00.491	4.3352.10.491
---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------

The indicated products correspond to the essential requirement of the following European Directives and Regulations:

2014/30/EU	26.02.2014	DIRECTIVE 2014/30/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 26 February 2014 on the harmonisation of the laws of the Member States relating to electromagnetic compatibility.
2014/35/EU	26.02.2014	DIRECTIVE 2014/35/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 26 February 2014 on the harmonisation of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits.
2017/2102/EU	15.11.2017	DIRECTIVE (EU) 2017/2102 of the European Parliament and of the Council of November 15, 2017 amending Directive 2011/65 / EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment.
2012/19/EU	13.08.2012	DIRECTIVE 2012/19/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 4 July 2012 on waste electrical and electronic equipment (WEEE).
2018/1139/EU	04.07.2018	Regulation (EU) 2018/1139 of the European Parliament and of the Council of 4 July 2018 on common rules in the field of civil aviation and establishing a European Union Aviation Safety Agency.

The indicated products comply with the regulations of the directives. This is proved by the compliance with the following standards:

DIN EN IEC 61000-6-2	2019-11	Electromagnetic compatibility Immunity for industrial environment
DIN EN 61000-6-3:2007 + A1:2011	2011-09	Electromagnetic compatibility (EMC). Generic standards. Emission standard for residential, commercial and light-industrial environments
DIN EN 61010-1	2020-03	Safety requirements for electrical equipment for measurement, control, and laboratory use. General requirements
DIN EN IEC 63000	2019-05	Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances.

Göttingen, 26.08.2024

General Manager - Dr. Christoph Peper

Development Manager - ppa. Jörg Petererit

This declaration of conformity is issued under the sole responsibility of the manufacturer.

This declaration certifies the compliance with the mentioned directives, however does not include any warranty of characteristics.

Please pay attention to the security advises of the provided instructions for use.

## 18 UK-CA-Declaration of Conformity

**Manufacturer:** Adolf Thies GmbH & Co. KG  
Hauptstraße 76  
37083 Göttingen, Germany

<http://www.thiesclima.com>

**Product:** Windsensor First Class Advaced II and X

Doc. Nr. 1575-45530\_Ca

**Article Overview:**

4.3352.00.000 4.3352.10.000 4.3352.00.400 4.3352.10.400 4.3352.00.401 4.3352.10.401 4.3352.00.491 4.3352.10.491

The indicated products correspond to the essential requirement of the following Directives and Regulations:

1091	08.12.2016	The Electromagnetic Compatibility Regulations 2016
1101	08.12.2016	The Electrical Equipment (Safety) Regulations 2016
RoHS Regulations 2012	01.01.2021	The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012
3113	01.01.2021	Regulations: waste electrical and electronic equipment (WEEE)

The indicated products comply with the regulations of the directives. This is proved by the compliance with the following standards:

BS EN IEC 61000-6-2 25.02.2019	Electromagnetic compatibility (EMC). Generic standards. Immunity standard for industrial environments
BS EN IEC 61000-6-3 30.03.2021	Electromagnetic compatibility (EMC). Generic standards. Emission standard for equipment in residential environments
BS EN 61010-1+A1 31.03.2017	Safety requirements for electrical equipment for measurement, control, and laboratory use. General requirements
BS EN IEC 63000 10.12.2018	Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances

Göttingen, 26.08.2024

Legally binding signature:



General Manager - Dr. Christoph Peper

Legally binding signature:



Development Manager - ppa. Jörg Peterleit

This declaration of conformity is issued under the sole responsibility of the manufacturer.

This declaration certifies the compliance with the mentioned directives, however does not include any warranty of characteristics.

Please pay attention to the security advises of the provided instructions for use.

## 19 More Information / Documents as download

---

Further information can be found in the short instructions for use. These document and also the instruction for use are available for download under the following links.

Short instruction for use

[https://www.thiesclima.com/db/dnl/4.3352.x0.400-401\\_Wind\\_Transmitter\\_FirstClass-Advanced-X\\_eng\\_short.pdf](https://www.thiesclima.com/db/dnl/4.3352.x0.400-401_Wind_Transmitter_FirstClass-Advanced-X_eng_short.pdf)

Instruction for use

[https://www.thiesclima.com/db/dnl/4.3352.x0.400-401\\_Wind\\_Transmitter\\_FirstClass-Advanced-X\\_eng.pdf](https://www.thiesclima.com/db/dnl/4.3352.x0.400-401_Wind_Transmitter_FirstClass-Advanced-X_eng.pdf)



**Please contact us for your system requirements.  
We advise you gladly.**

**ADOLF THIES GMBH & CO. KG**  
Meteorology and environmental metrology  
Hauptstraße 76 · 37083 Göttingen · Germany  
Phone +49 551 79001-0 · Fax +49 551 79001-65  
[info@thiesclima.com](mailto:info@thiesclima.com)



[www.thiesclima.com](http://www.thiesclima.com)