

Wind Transmitter - compact

Instruction for Use

4.3519.xx.140...961



Dok. No. 021075/10/22

THE WORLD OF WEATHER DATA

Safety Instructions

- Before operating with or at the device/product, read through the operating instructions. This manual contains instructions which should be followed on mounting, start-up, and operation. A non-observance might cause:
 - failure of important functions
 - endangerment of persons by electrical or mechanical effect
 - damage to objects
- Mounting, electrical connection and wiring of the device/product must be carried out only by a qualified technician who is familiar with and observes the engineering regulations, provisions and standards applicable in each case.
- Repairs and maintenance may only be carried out by trained staff or **Adolf Thies GmbH & Co. KG**. Only components and spare parts supplied and/or recommended by **Adolf Thies GmbH & Co. KG** should be used for repairs.
- Electrical devices/products must be mounted and wired only in a voltage-free state.
- **Adolf Thies GmbH & Co KG** guarantees proper functioning of the device/products provided that no modifications have been made to the mechanics, electronics or software, and that the following points are observed:
 - All information, warnings and instructions for use included in these operating instructions must be taken into account and observed as this is essential to ensure trouble-free operation and a safe condition of the measuring system / device / product.
 - The device / product is designed for a specific application as described in these operating instructions.
 - The device / product should be operated with the accessories and consumables supplied and/or recommended by **Adolf Thies GmbH & Co KG** .
 - Recommendation: As it is possible that each measuring system / device / product may, under certain conditions, and in rare cases, may also output erroneous measuring values, it is recommended using redundant systems with plausibility checks for **security-relevant applications**.

Environment

- As a longstanding manufacturer of sensors Adolf Thies GmbH & Co KG is committed to the objectives of environmental protection and is therefore willing to take back all supplied products governed by the provisions of "*ElektroG*" (German Electrical and Electronic Equipment Act) and to perform environmentally compatible disposal and recycling. We are prepared to take back all Thies products concerned free of charge if returned to Thies by our customers carriage-paid.
- Make sure you retain packaging for storage or transport of products. Should packaging however no longer be required, please arrange for recycling as the packaging materials are designed to be recycled.



Documentation

- © Copyright **Adolf Thies GmbH & Co KG**, Göttingen / Germany
- Although these operating instructions have been drawn up with due care, **Adolf Thies GmbH & Co KG** can accept no liability whatsoever for any technical and typographical errors or omissions in this document that might remain.
- We can accept no liability whatsoever for any losses arising from the information contained in this document.
- Subject to modification in terms of content.
- The device / product should not be passed on without the/these operating instructions.

Contents

1	Models	4
2	Application	5
3	Mode of Operation	5
4	Recommendation Site Selection / Standard Installation	5
5	Installation.....	6
5.1	Mechanical Mounting.....	6
5.2	Electrical Mounting	7
5.3	Plug mounting	7
6	Connecting Diagram	8
7	Maintenance	9
8	Technical Data	10
9	Dimension diagram	11
10	Accessories	12
11	EC-Declaration of Conformity	13
12	UK-CA-Declaration of Conformity	14

Figure

Figure 1:	plug mounting.....	7
Figure 2:	Connecting Diagram for Models with fixed Connecting Cable.....	8
Figure 3:	Connecting Diagram for Models with Connector.....	9
Figure 4:	Dimensional Drawing Model cable gland	11
Figure 5:	Dimensional Drawing Model plug	11

1 Models

Order - No.	Electrical Output	Measuring range	Heating power	Connection
4.3519.00.140 4.3519.00.840 ¹⁾	0...20mA	0...50m/s	20W	12m Cable LiYCY 6 x 0,25mm ²
4.3519.00.141	4...20mA	0...50m/s	20W	12m Cable LiYCY 6 x 0,25mm ²
4.3519.00.161	0...10V	0...50m/s	20W	12m Cable LiYCY 6 x 0,25mm ²
4.3519.00.167	0...2V	0...50m/s	20W	12m Cable LiYCY 6 x 0,25mm ²
4.3519.00.173	0...5V	0...50m/s	20W	12m Cable LiYCY 6 x 0,25mm ²
4.3519.00.361	0...10V	0...3m/s max. 13,8V @ >3m/s	20W	12m Cable LiYCY 6 x 0,25mm ²
4.3519.00.441	4...20mA	0...40m/s	20W	3m PUR -Cable 6 x 0,25mm ²
4.3519.00.641	4...20mA	0...60m/s	20W	12m Cable LiYCY 6 x 0,25mm ²
4.3519.00.740	0...20mA	0...50m/s	20W	7 pol. Plug
4.3519.00.741	4...20mA	0...50m/s	20W	7 pol. Plug
4.3519.00.761	0...10V	0...50m/s	20W	7 pol. Plug
4.3519.00.773	0...5V	0...50m/s	20W	7 pol. Plug
4.3519.00.961	0...10V	0...15m/s	20W	12m Cable LiYCY 6 x 0,25mm ²
4.3519.01.140	0...20mA	0...50m/s	20W	1,5 -3m Spiral Cable LiYY 6 x 0,14mm ²
4.3519.02.141	4...20mA	0...50m/s	10W	2m Cable 6 x 0,56mm ²
4.3519.04.441	4...20mA	0...40m/s	20W	0,95m PUR- Cable 6 x 0,25mm ²
4.3519.05.141	4...20mA	0...50m/s	20W	15m Cable LiYCY 6 x 0,25mm ²
4.3519.05.161	0...10V	0...50m/s	20W	15m Cable LiYCY 6 x 0,25mm ²
4.3519.05.641	4...20mA	0...60m/s	20W	15m Cable LiYCY 6 x 0,25mm ²
4.3519.10.441	4...20mA	0...40m/s	Without heating	12m Cable LiYCY 6 x 0,25mm ²
4.3519.20.141	4...20mA	0...50m/s	10W	12m Cable LiYCY 6 x 0,25mm ²
4.3519.39.141	4...20mA	0...50m/s	20W	12m Cable LiYCY 6 x 0,25mm ² with cable lug at the shield
4.3519.40.140	0...20mA	0...50m/s	60W	12m Cable LiYCY 6 x 0,5mm ²
4.3519.40.141	4...20mA	0...50m/s	60W	12m Cable LiYCY 6 x 0,5mm ²
4.3519.40.161	0...10V	0...50m/s	60W	12m Cable LiYCY 6 x 0,5mm ²
4.3519.40.167	0...2V	0...50m/s	60W	12m Cable LiYCY 6 x 0,5mm ²
4.3519.40.173	0...5V	0...50m/s	60W	12m Cable LiYCY 6 x 0,5mm ²
4.3519.40.740	0...20mA	0...50m/s	60W	7 pol. Plug
4.3519.40.741	4...20mA	0...50m/s	60W	7 pol. Plug
4.3519.40.761	0...10V	0...50m/s	60W	7 pol. Plug
4.3519.41.741	4...20mA	0...75m/s	110W	7 pol. Plug

4.3519.41.742	4...20mA	0...50m/s	110W	7 pol. Plug
1) Counter nut inverse-mounted, see figure 6.				

2 Application

The wind transmitter detects the horizontal wind speed. The measured values are available at the output as analogue voltage or current signal to control for instance wind power plant.

An electronically-regulated heating system has been installed in some models (see chapter 1) for winter time use, in order to prevent the ball-bearing and the external rotation parts from freezing.

Thanks to the 60/110-Watt-heating as well as to the optimized regulating characteristic, model no. 4.3519.40/41.xxx is especially suited for the extremely difficult application in high mountains or at other critical sites, where icing is to be expected.

3 Mode of Operation

The cup star (in ball bearing) is set into rotation by the wind. An opto-electronic speed scanning produces a frequency which is transformed into an analogue signal by an integrated measuring transformer.

The outer parts of the instrument are made of corrosion-resistant materials. Labyrinth gaskets protect the parts inside the instrument against precipitations.

4 Recommendation Site Selection / Standard Installation

In general wind measurement instruments should be able to detect the wind conditions of a large area. In order to obtain comparable values when determining the surface wind, measurements should be taken at a height of 10 meters over an even area with no obstacles. An area with no obstacles means that the distance between the wind direction transmitter and an obstacle should be at least 10 times the height of the obstacle (s. VDI 3786). If it is not possible to fulfil this condition then the wind direction transmitter should be set up a height where local obstacles do not influence the measured values to any significant extent (approx. 6-10m above the obstacle). The wind direction transmitter should be set up in the centre of flat roofs and not on the edge in order to avoid any preferential directions.

5 Installation

Attention:

Storing, mounting and operation under weather conditions is permissible only in vertical position, as otherwise water can get into the instrument.

Remark:

When using fastening adapters (angle, traverses, etc.) please take a possible effect by turbulences into consideration.

Caution:

The device may only be supplied with a power supply of the „Class 2, limited power“.

5.1 Mechanical Mounting

The mounting of the transmitter could be done for example at a support with a boring of PG 21 or on hangers with a boring of 29mm Ø.

Tools:

Hexagonal wrench SW36.

Procedure:

1. Push cable/ plug connector of the wind transmitter through the borehole of the mast, tube, arm etc.
2. Put wind transmitter on mast, tube, arm etc.
3. Safeguard the wind direction transmitter by two hexagonal nuts (PG21, SW 36).

Caution: The Hexagon nuts must be tightened to 6Nm.

Remark:

The support is not included in delivery.



5.2 Electrical Mounting

For electrical connection please refer to the connecting diagram.

5.3 Plug mounting

Applies only to instruments with connection „plug“.

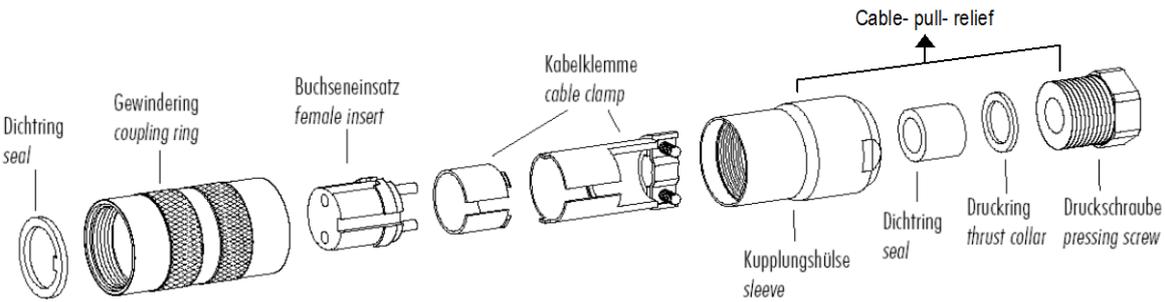
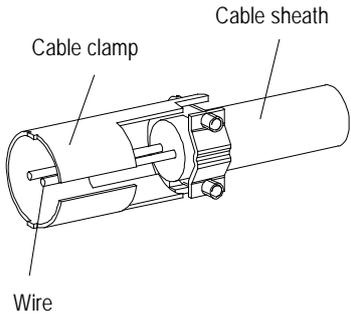
<p>Coupling socket, Typ:Binder, Serial 423, EMC with cable clamp Cable connection: without cable shield</p>	
	
<ol style="list-style-type: none"> 1. Stringing parts on cable acc. to plan given above. 2. Stripping cable sheath 20mm. 3. Cutting uncovered shield 20mm. 4. Stripping wire 5mm. 5. Soldering wire to the insert. 6. Positioning shield in cable clamp. 7. Screwing-on cable clamp. 8. Assembling remaining parts acc. to upper plan. 9. Tightening pull-relief of cable by screw-wrench (SW16 und 17). 	

Figure 1: plug mounting

6 Connecting Diagram

<p>Order – No.</p> <p>4.3519.00.140</p> <p>4.3519.00.141</p> <p>4.3519.00.161 ²⁾</p> <p>4.3519.00.167</p> <p>4.3519.00.173</p> <p>4.3519.00.361 ²⁾</p> <p>4.3519.00.441</p> <p>4.3519.00.641</p> <p>4.3519.00.840</p> <p>4.3519.00.961 ²⁾</p> <p>4.3519.01.140</p> <p>4.3519.02.141</p> <p>4.3519.04.441</p> <p>4.3519.05.141</p> <p>4.3519.05.161</p> <p>4.3519.05.641</p> <p>4.3519.10.441</p> <p>4.3519.20.141</p> <p>4.3519.39.141</p> <p>4.3519.40.140</p> <p>4.3519.40.141</p> <p>4.3519.40.161 ²⁾</p> <p>4.3519.40.167</p> <p>4.3519.40.173</p>	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>Separate Voltage Supply</p> </div> <div style="text-align: center;"> <p>Shared Voltage</p> </div> </div>
	<p>Order-No 4.3519.10.441 (Instrument without heating) Pin 5 and 6 not connected</p>

Figure 2: Connecting Diagram for Models with fixed Connecting Cable

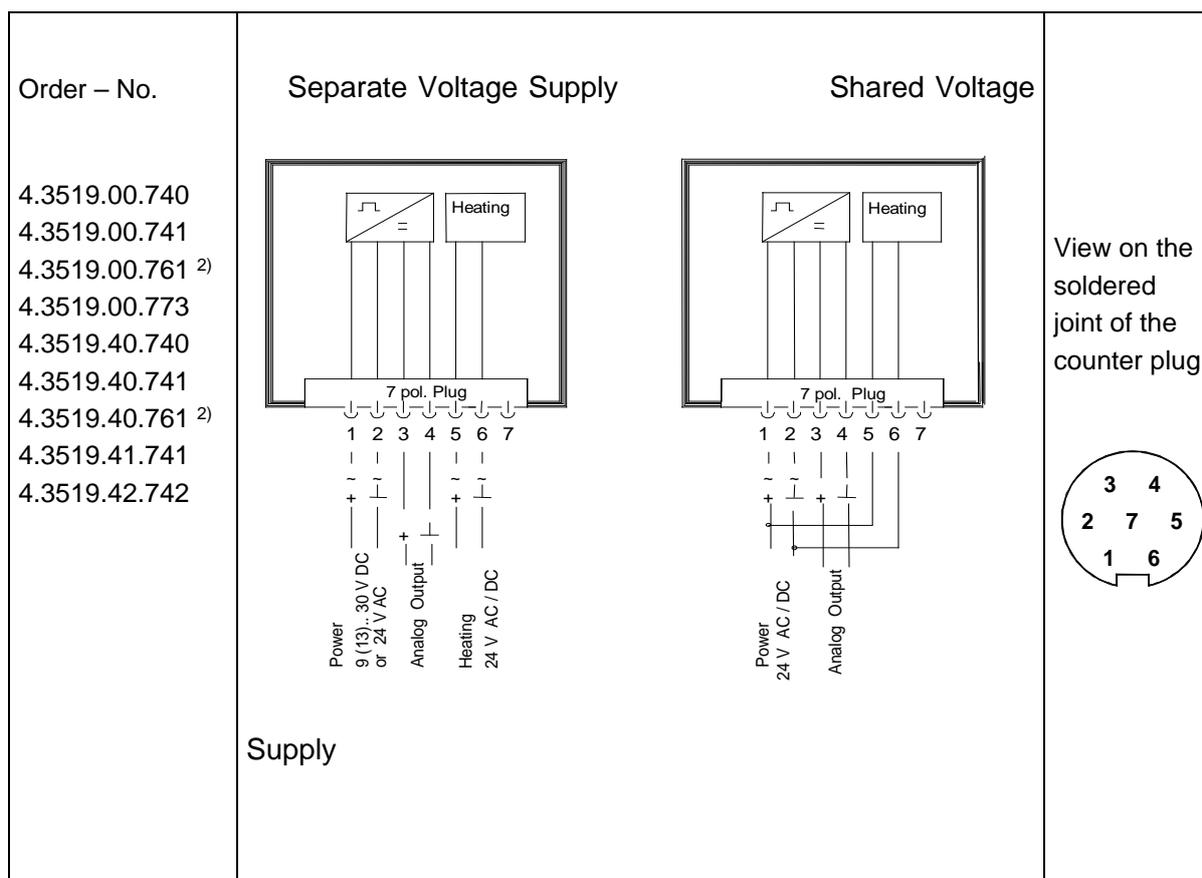


Figure 3: Connecting Diagram for Models with Connector

7 Maintenance

After proper mounting the instrument works maintenance free.

Heavy pollution can clog up the slit between the rotating and the stationary parts of the wind transmitter. This slit must be kept clean.

Cleaning

For the cleaning of the device should use a damp cloth without chemical cleaning agents are used.

8 Technical Data

Measuring range	See model.		
Resolution	0,1m/s.		
Starting velocity	0,5m/s.		
Accuracy	± 0,5m/s or ± 3% of measuring value.		
Delay distance	< 3,5m (acc. to DIN ISO 17713-1).		
Measuring principle	Opto-electronic (slotted disc).		
Electrical output	See model.		
Load for current output (mA) for voltage output (V)	Max. 500Ohm (for operating voltage > 15 V DC). Min. 1KΩ.		
Electrical supply for electronics			
	U: 9...30V DC oder 24V AC/DC	I: 0,05A	P: 1,5W
²⁾ für 0 -10 V output	U: 13...30V DC oder 24V AC/DC	I: 0,05A	P: 1,5W
Electrical supply for heating			
4.3519.00/01/02/04/05/20/39.xxx	U: 24V AC/DC, 45...65Hz	I: 0,83A	P: 20W
4.3519.20.xxx	U: 24V AC/DC, 45...65Hz	I: 0,42A	P: 10W
4.3519.40.xx	U: 24V AC/DC, 45...65Hz	I: 2,5A	P: 60W
4.3519.41.741 / 742	U: 24V AC/DC, 45...65Hz	I: 4,5A	P: 110W
Operating voltage heating	-40°C...+70°C -50°C...+70°C (@ 4.3519.41.741 / 742)		
Survival speed	Maximally 80m /s, 30 minutes.		
Connection	See model.		
Dimensions	See dimensional drawing.		
Montage	For ex. onto mast tube with receptacle thread Pg 21 or boring Ø 29mm.		
Protection	IP 55		
Weight	0,40 – 0,75kg depending on model.		
Material	Housing Cup star Bottom	Aluminium (AlMgSi1). Synthetic, with fibre glass (PC-GF10). Synthetic (POM H2320).	

9 Dimension diagram

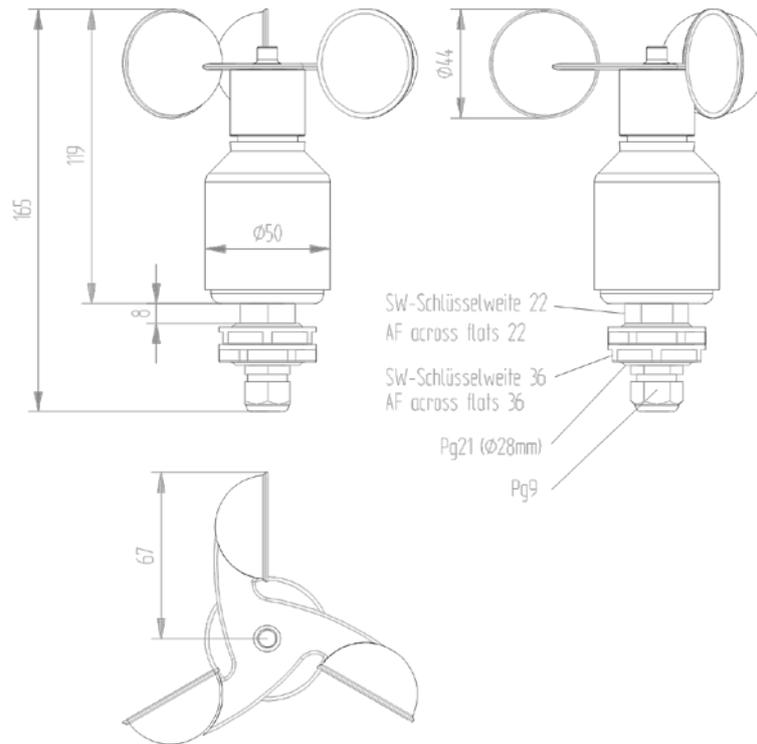


Figure 4: Dimensional Drawing Model cable gland

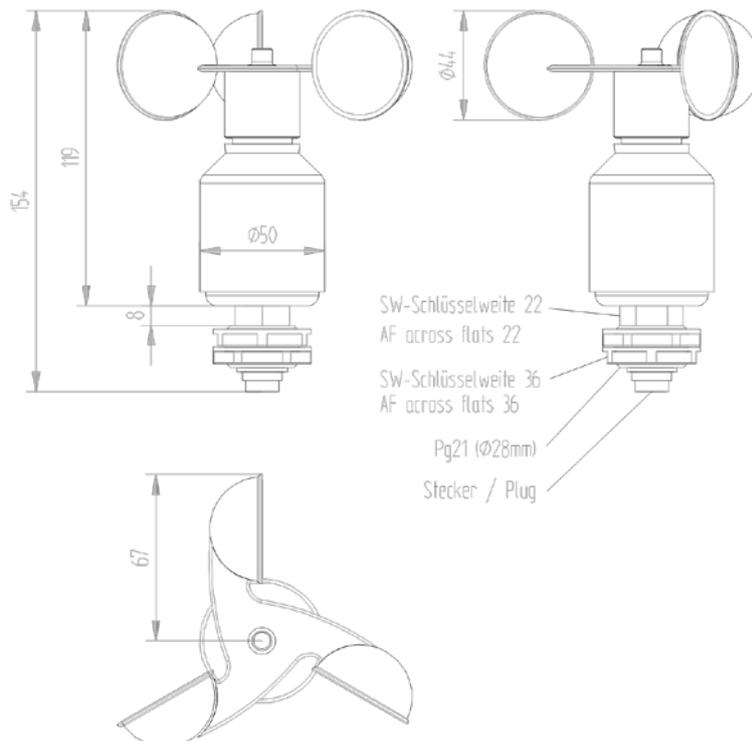


Figure 5: Dimensional Drawing Model plug

10 Accessories

For the wind transmitter the following accessories are available:

Traverse For mounting the wind transmitter and wind direction transmitter <i>compact</i> jointly onto a mast.	4.3171.30.000 4.3171.31.000	Clamping range: Ø 48 ... 102mm Clamping range: Ø 116 ... 200mm Sensor distance: 0,8m Material: Aluminium
Traverse, short For mounting the wind transmitter <i>compact</i> onto a mast.	4.3171.40.000 4.3171.41.000	Clamping range: Ø 48 ... 102mm Clamping range: Ø 116 ... 200mm Length: 0,4m Material: Aluminium
Lightning Rod For mounting onto the a/m traverse.	506351	Length: 0,56m Material: Stainless steel

Other accessories such as cables, power supply units, masts as well as additional mast- or system-constructions on request.

11 EC-Declaration of Conformity

Manufacturer: Adolf Thies GmbH & Co. KG
 Hauptstraße 76
 37083 Göttingen, Germany
<http://www.thiesclima.com>

Product: WG – compact analog

Doc. Nr. 1221-44851_CE

Article Overview:

4.3519.00.140	4.3519.00.141	4.3519.00.161	4.3519.00.167	4.3519.00.173	4.3519.00.361	4.3519.00.441	4.3519.00.641	4.3519.00.740	4.3519.00.741
4.3519.00.761	4.3519.00.767	4.3519.00.773	4.3519.00.840	4.3519.00.961	4.3519.01.140	4.3519.02.141	4.3519.02.441	4.3519.03.141	4.3519.04.441
4.3519.05.141	4.3519.05.161	4.3519.05.641	4.3519.06.441	4.3519.09.141	4.3519.10.441	4.3519.20.141	4.3519.39.141	4.3519.40.140	4.3519.40.141
4.3519.40.161	4.3519.40.167	4.3519.40.173	4.3519.40.740	4.3519.40.741	4.3519.40.761	4.3519.41.741	4.3519.41.742	4.3519.53.141	4.3519.54.141
4.3519.55.141	4.3519.83.141								

The indicated products correspond to the essential requirement of the following European Directives and Regulations:

2014/30/EU	26.02.2014	DIRECTIVE 2014/30/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 26 February 2014 on the harmonisation of the laws of the Member States relating to electromagnetic compatibility.
2017/2102/EU	15.11.2017	DIRECTIVE (EU) 2017/2102 of the European Parliament and of the Council of November 15, 2017 amending Directive 2011/65 / EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment.
2012/19/EU	13.08.2012	DIRECTIVE 2012/19/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 4 July 2012 on waste electrical and electronic equipment (WEEE).
2018/1139/EU	04.07.2018	Regulation (EU) 2018/1139 of the European Parliament and of the Council of 4 July 2018 on common rules in the field of civil aviation and establishing a European Union Aviation Safety Agency.

The indicated products comply with the regulations of the directives. This is proved by the compliance with the following standards:

DIN EN IEC 61000-6-2	2019-11	Electromagnetic compatibility immunity for industrial environment
DIN EN 61000-6-3:2007 + A1:2011	2011-09	Electromagnetic compatibility (EMC). Generic standards. Emission standard for residential, commercial and light-industrial environments
DIN EN 61010-1	2020-03	Safety requirements for electrical equipment for measurement, control, and laboratory use. General requirements
DIN EN IEC 63000	2019-05	Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances.

Legally binding signature:



General Manager - Dr. Christoph Peper

Legally binding signature:



Development Manager - ppa. Jörg Petereit

This declaration certifies the compliance with the mentioned directives, however does not include any warranty of characteristics. Please pay attention to the security advises of the provided instructions for use.

12 UK-CA-Declaration of Conformity

Manufacturer: Adolf Thies GmbH & Co. KG
 Hauptstraße 76
 37083 Göttingen, Germany
<http://www.thiesclima.com>

Product: WG – compact analog

Doc. Nr. 1221-44851_CA

Article Overview:

4.3519.00.140	4.3519.00.141	4.3519.00.161	4.3519.00.167	4.3519.00.173	4.3519.00.361	4.3519.00.441	4.3519.00.641	4.3519.00.740	4.3519.00.741
4.3519.00.761	4.3519.00.767	4.3519.00.773	4.3519.00.840	4.3519.00.961	4.3519.01.140	4.3519.02.141	4.3519.02.441	4.3519.03.141	4.3519.04.441
4.3519.05.141	4.3519.05.161	4.3519.05.641	4.3519.06.441	4.3519.09.141	4.3519.10.441	4.3519.20.141	4.3519.39.141	4.3519.40.140	4.3519.40.141
4.3519.40.161	4.3519.40.167	4.3519.40.173	4.3519.40.740	4.3519.40.741	4.3519.40.761	4.3519.41.741	4.3519.41.742	4.3519.53.141	4.3519.54.141
4.3519.55.141	4.3519.83.141								

The indicated products correspond to the essential requirement of the following Directives and Regulations:

1091	08.12.2016	The Electromagnetic Compatibility Regulations 2016
RoHS Regulations 2012	01.01.2021	The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012
3113	01.01.2021	Regulations: waste electrical and electronic equipment (WEEE)
2018/1139/EU	04.07.2018	Regulation (EU) 2018/1139 of the European Parliament and of the Council of 4 July 2018 on common rules in the field of civil aviation and establishing a European Union Aviation Safety Agency.

The indicated products comply with the regulations of the directives. This is proved by the compliance with the following standards:

BS EN IEC 61000-6-2	25.02.2019	Electromagnetic compatibility (EMC). Generic standards. Immunity standard for industrial environments
BS EN IEC 61000-6-3	30.03.2021	Electromagnetic compatibility (EMC). Generic standards. Emission standard for equipment in residential environments
BS EN 61010-1+A1	31.03.2017	Safety requirements for electrical equipment for measurement, control, and laboratory use. General requirements
BS EN IEC 63000	10.12.2018	Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances

This declaration of conformity is issued under the sole responsibility of the manufacturer.

Legally binding signature:



General Manager - Dr. Christoph Peper

Legally binding signature:



Development Manager - ppa. Jörg Petereit

This declaration certifies the compliance with the mentioned directives, however does not include any warranty of characteristics.
 Please pay attention to the security advises of the provided instructions for use.

**Please contact us for your system requirements.
We advise you gladly.**

ADOLF THIES GMBH & CO. KG

Meteorology and environmental metrology
Hauptstraße 76 · 37083 Göttingen · Germany
Phone +49 551 79001-0 · Fax +49 551 79001-65
info@thiesclima.com

www.thiesclima.com

